


Aiologs H-pattern Shifter

User Manual

The driver is install automatically

Software for control lightning
<https://shop.aiologs.net/files/led.zip>




Customers service
aiologs.net@gmail.com

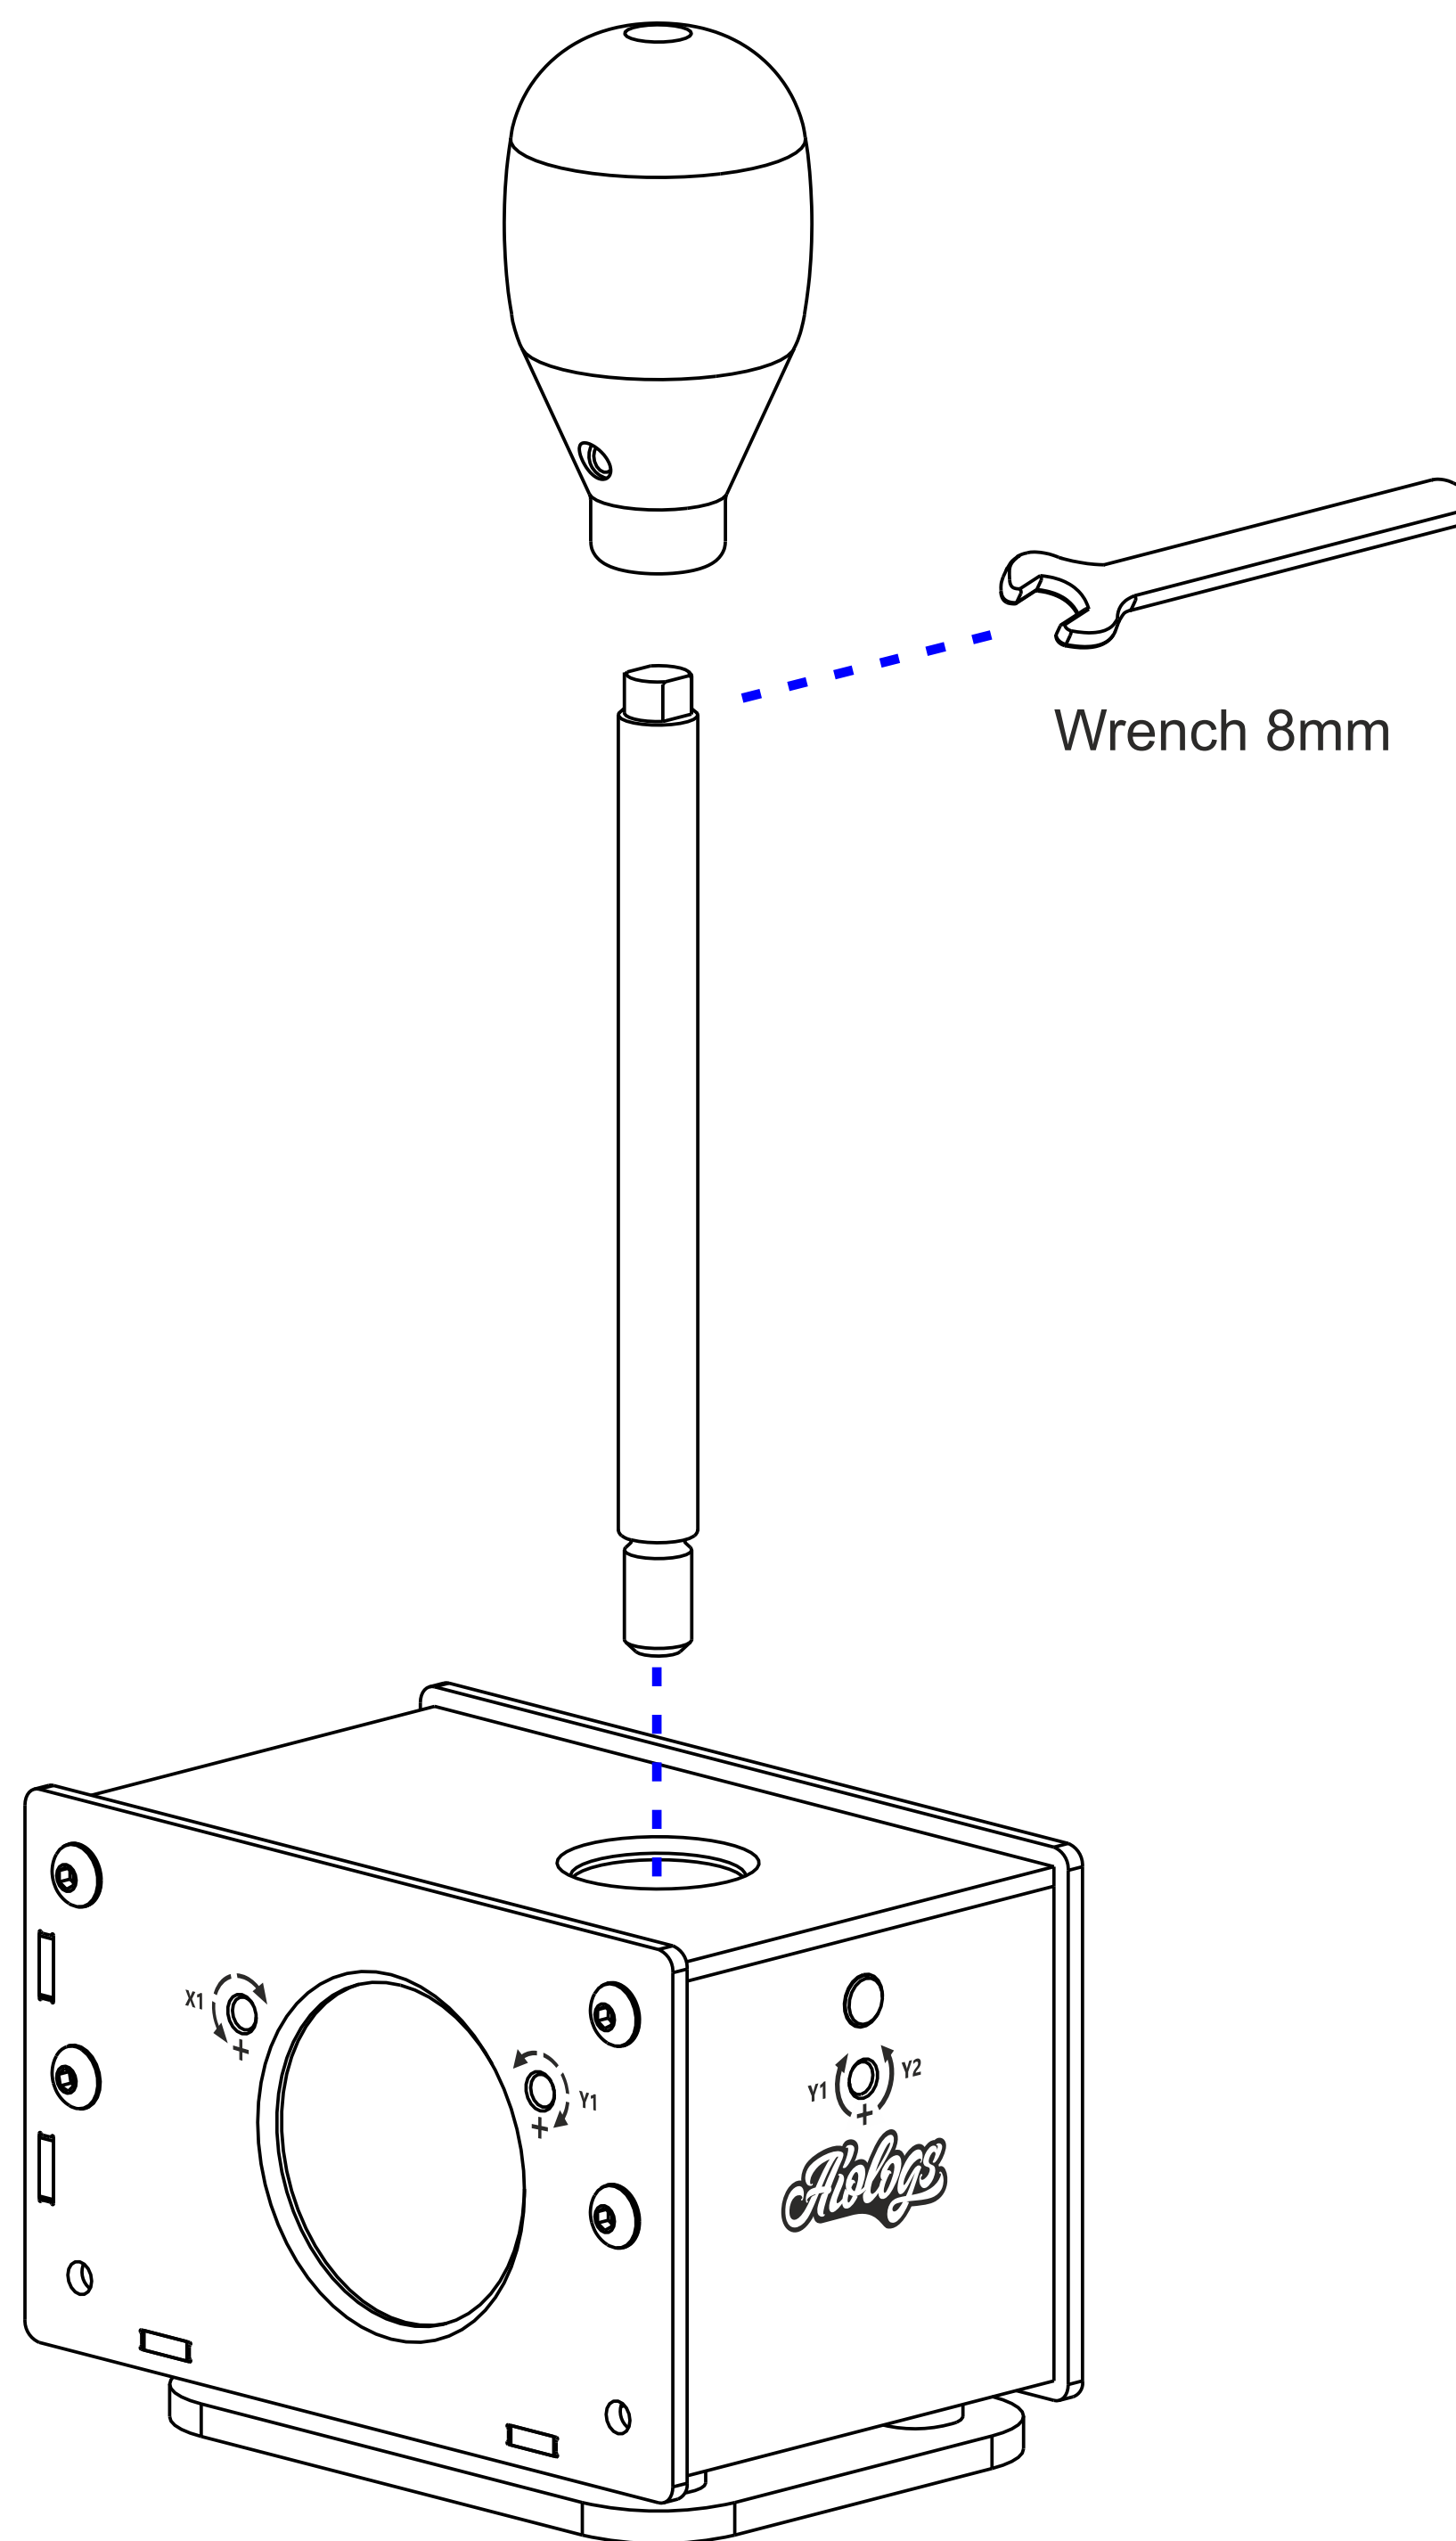

Settings

Y-Axis

Tension mod selector
3 stops

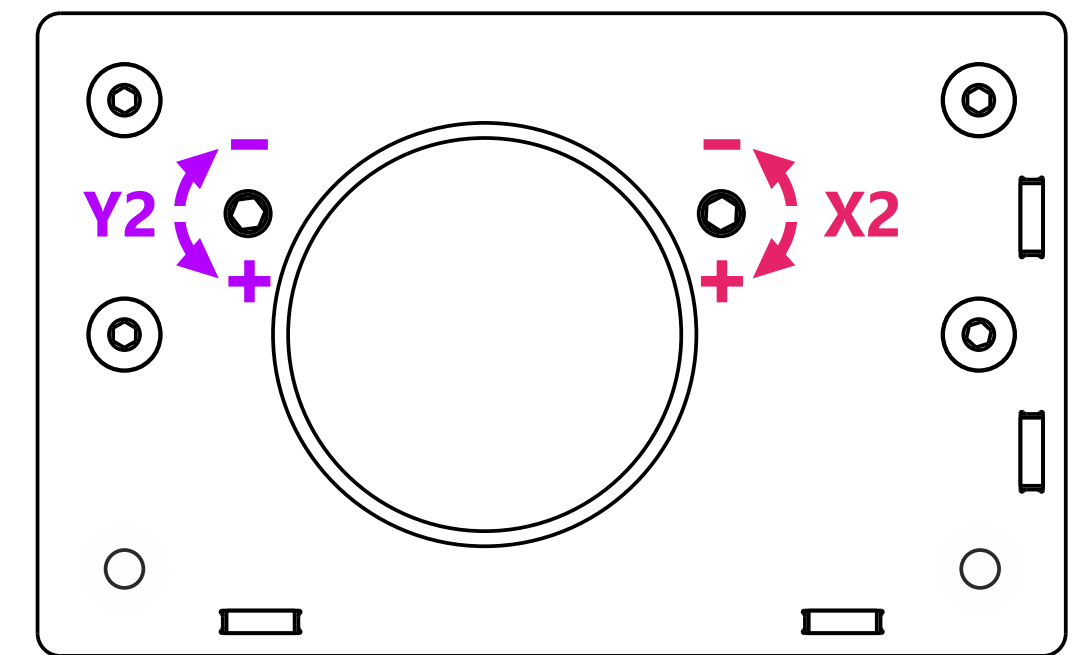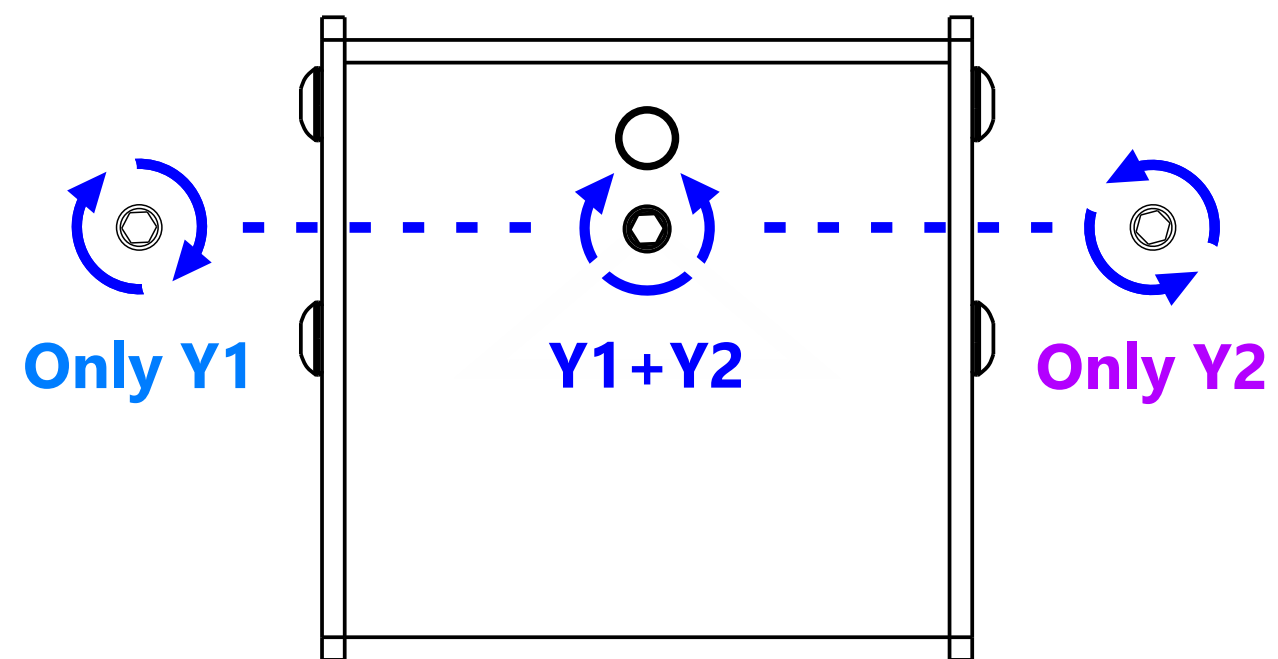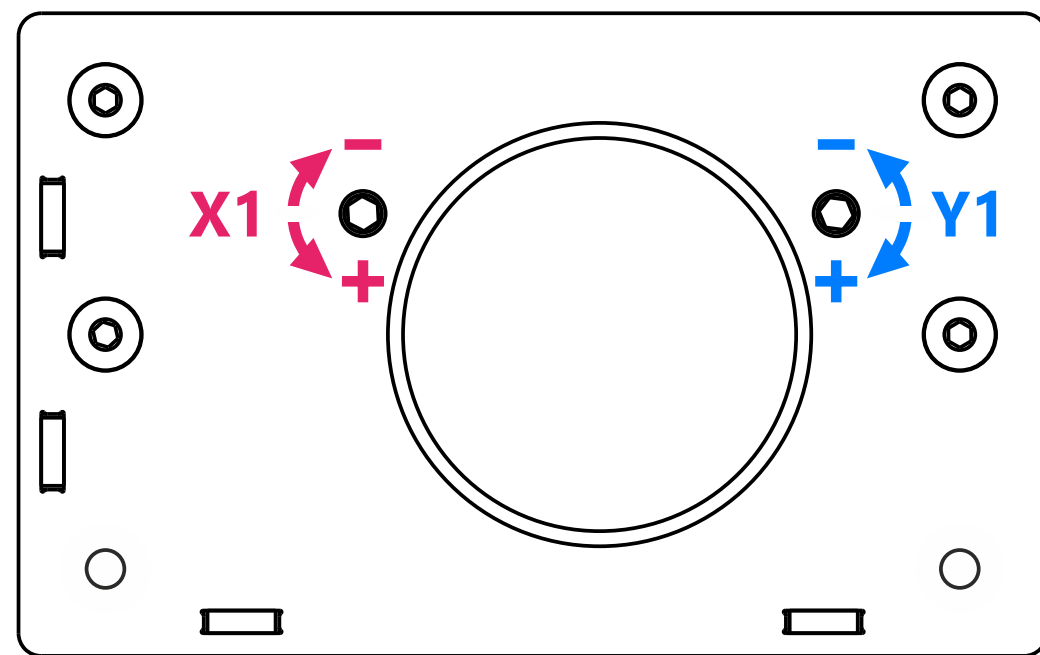

Y-Axis

Y1: Tension regulator (**Smooth mod**) – 4 stops

Y2: Tension regulator (**Sharp mod**) – 4 stops




X-Axis

X1: Tension regulator 1 – 3 stops

X2: Tension regulator 2 – 3 stops

Additional locking pressure of gears R and 7 depends on X-axis tension



Sharp Smooth

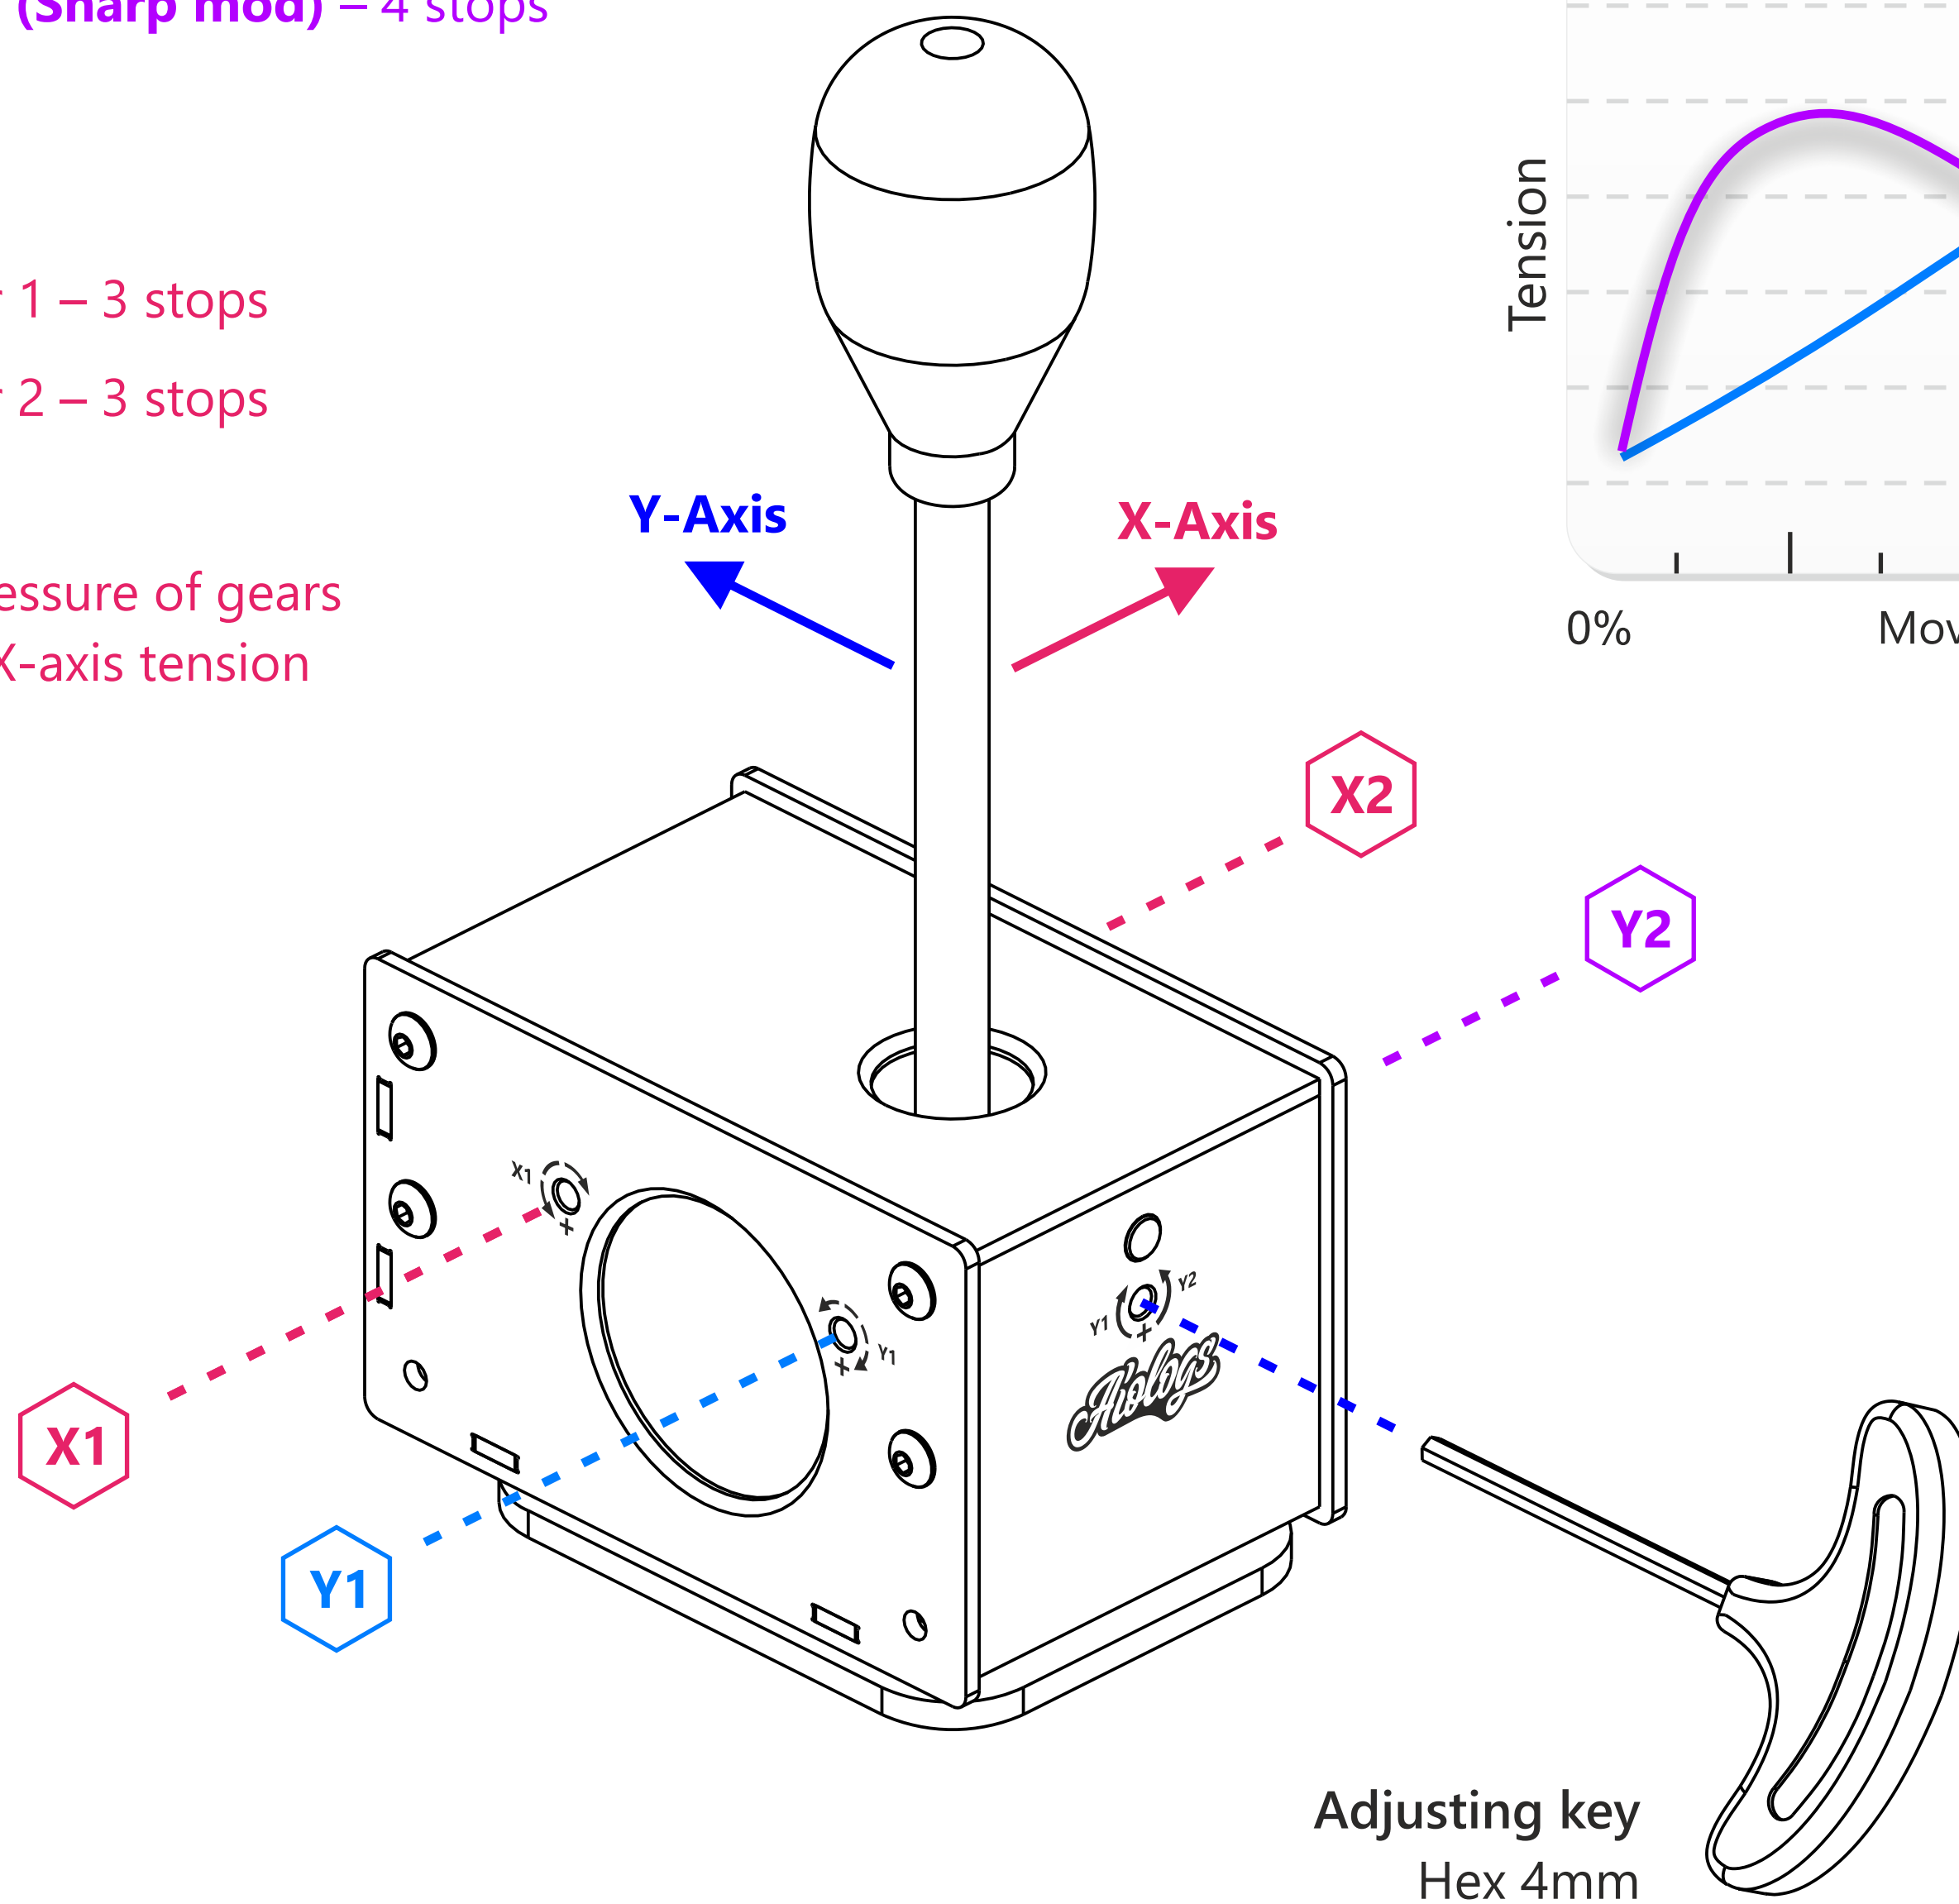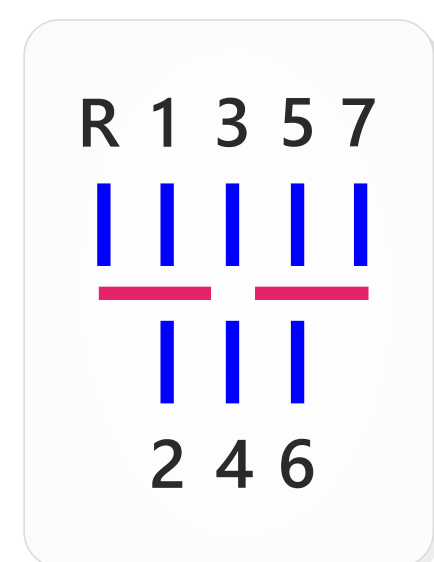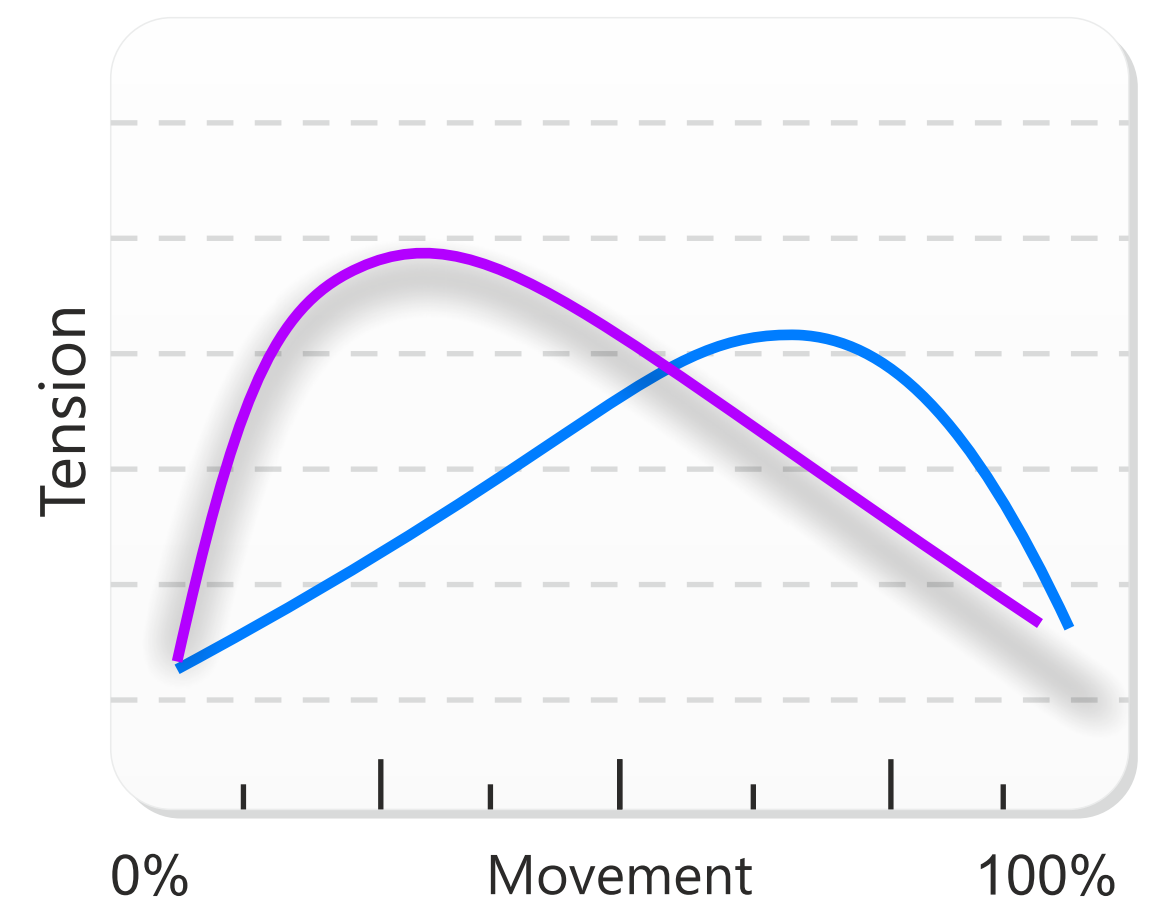


Mounting options

Plate position A


1

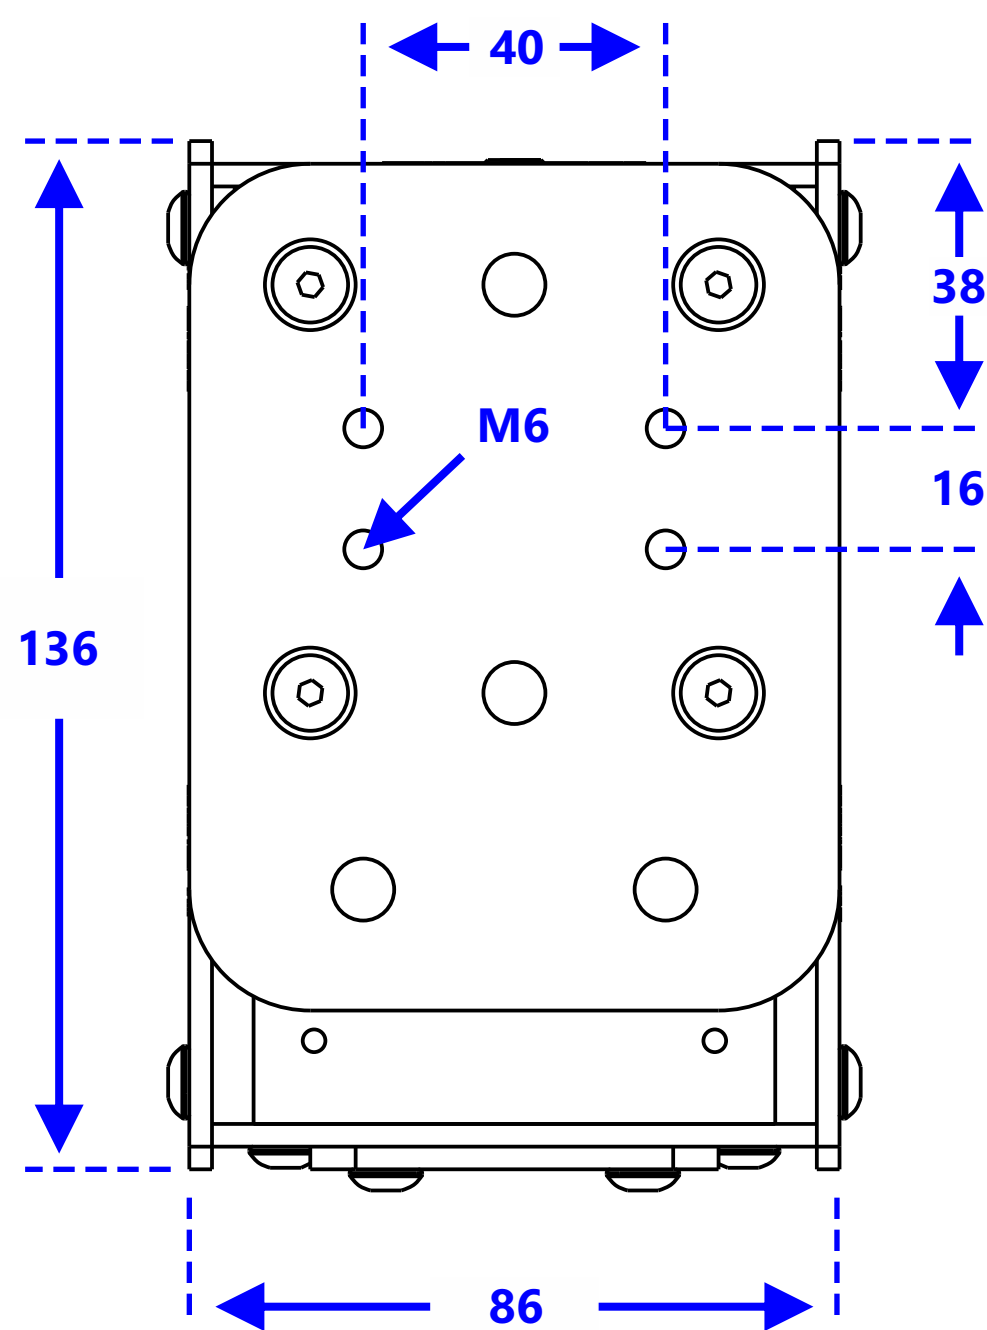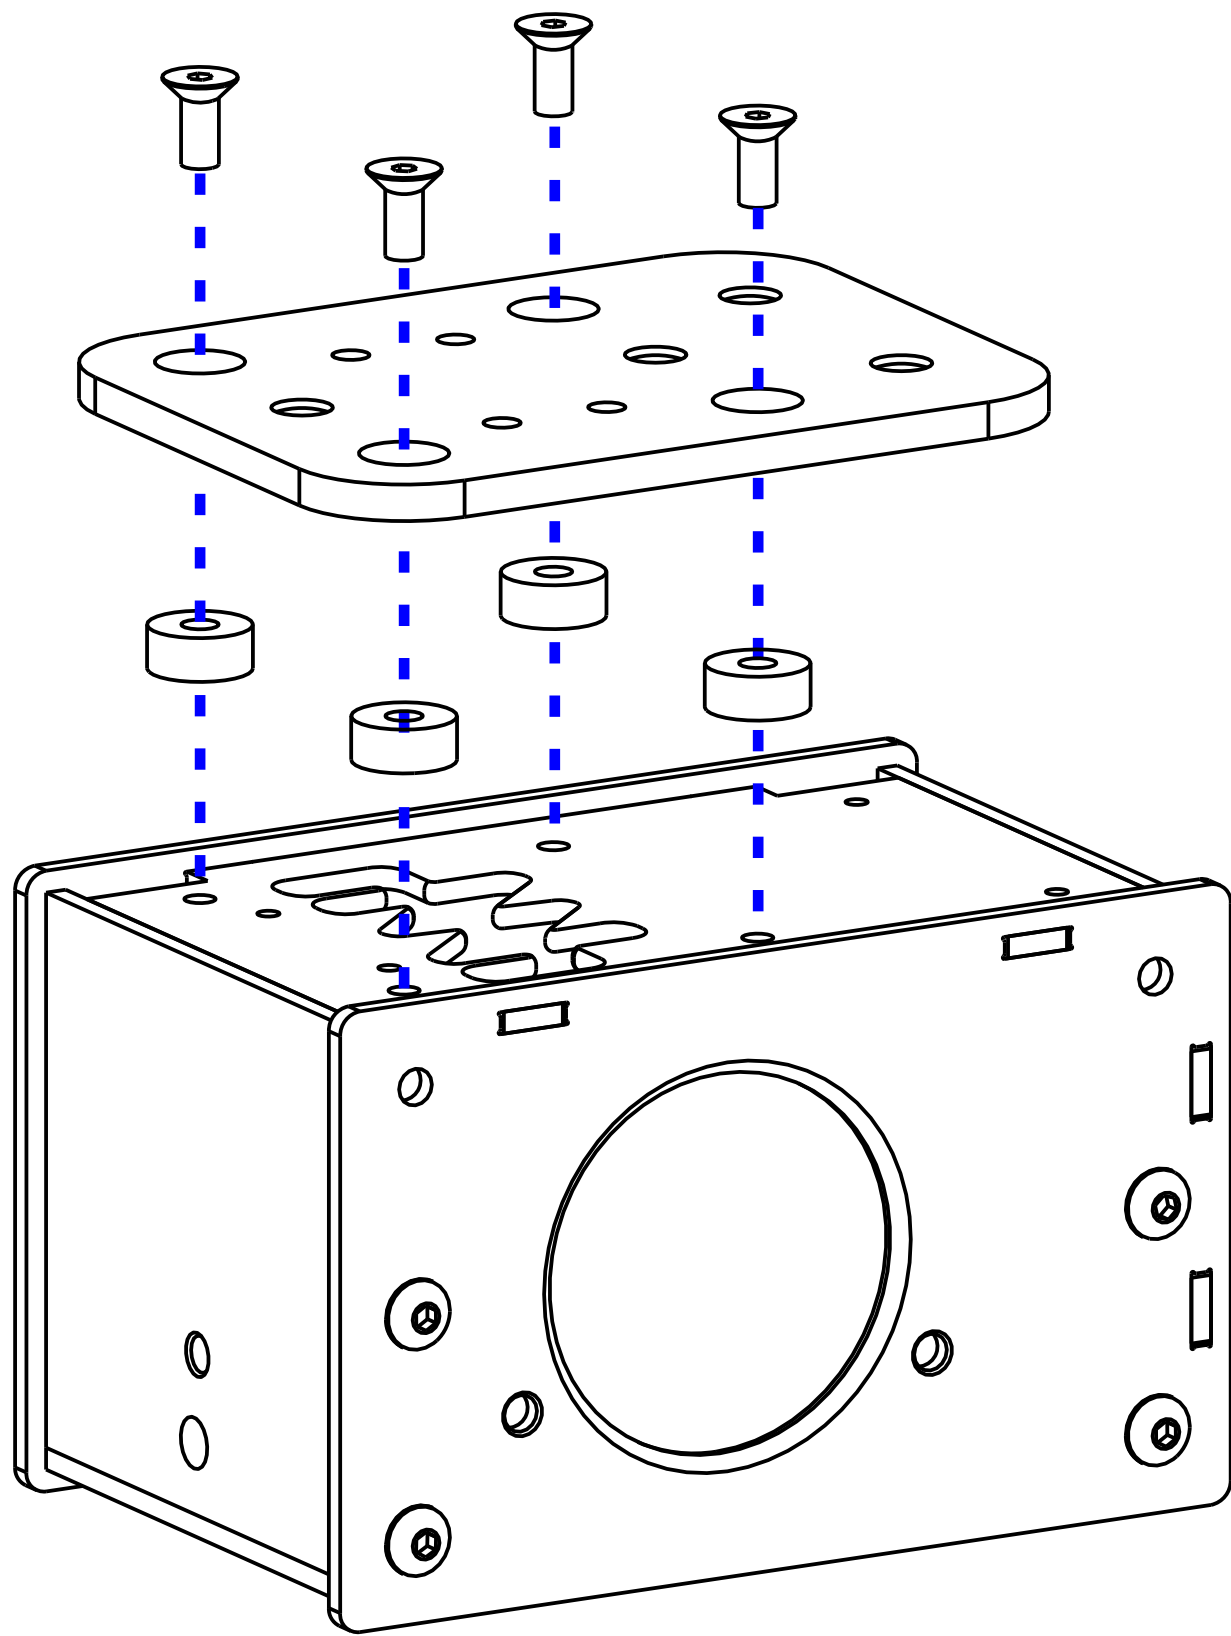

2

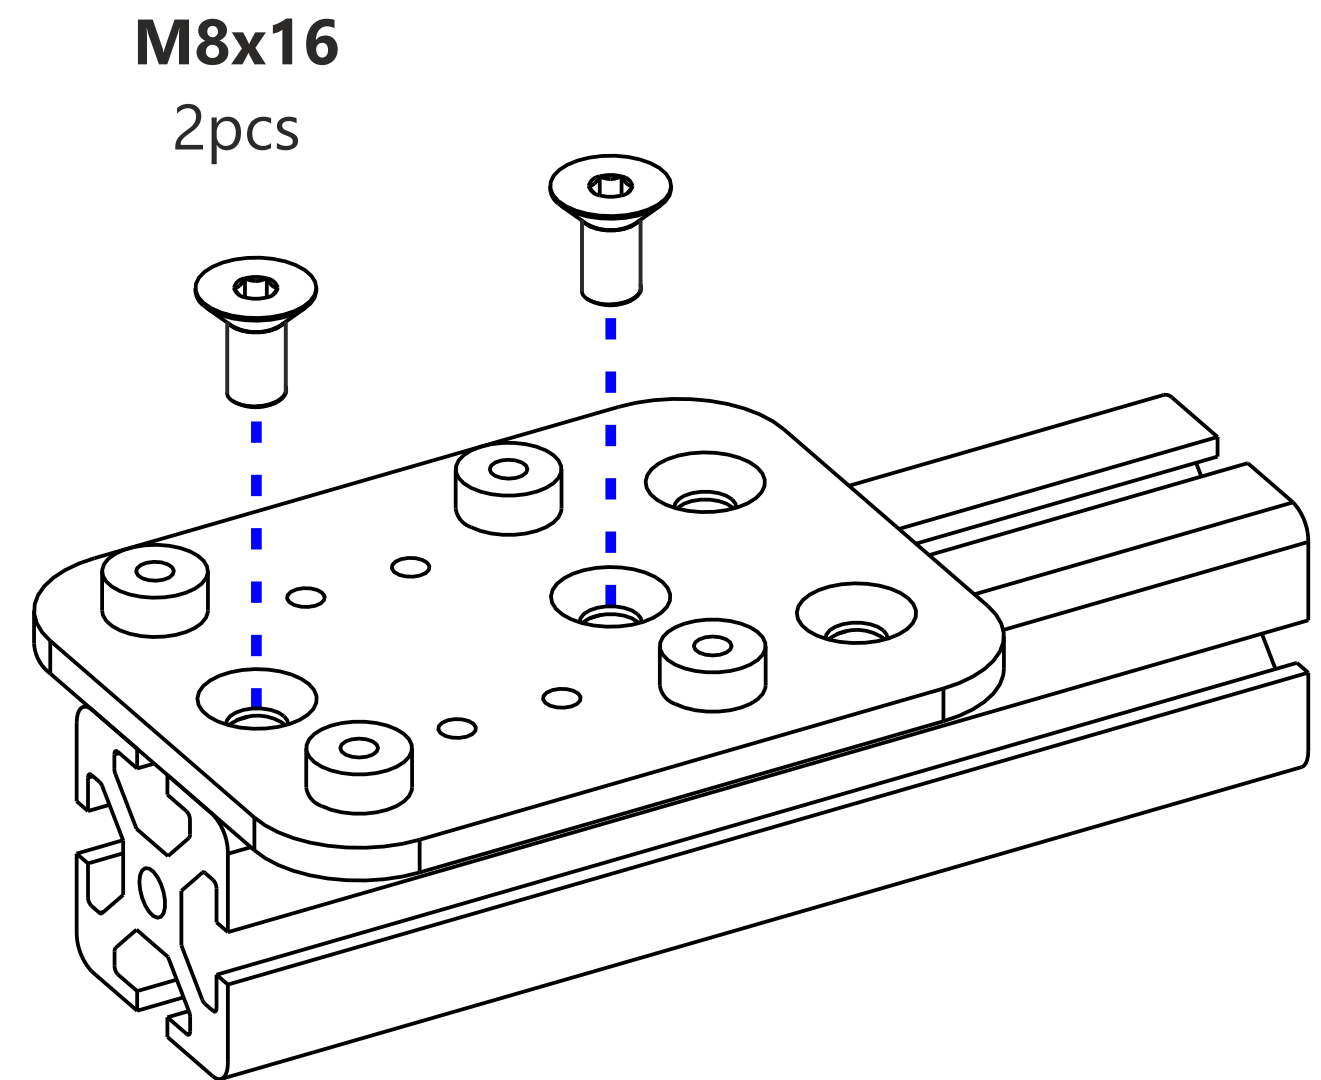


3

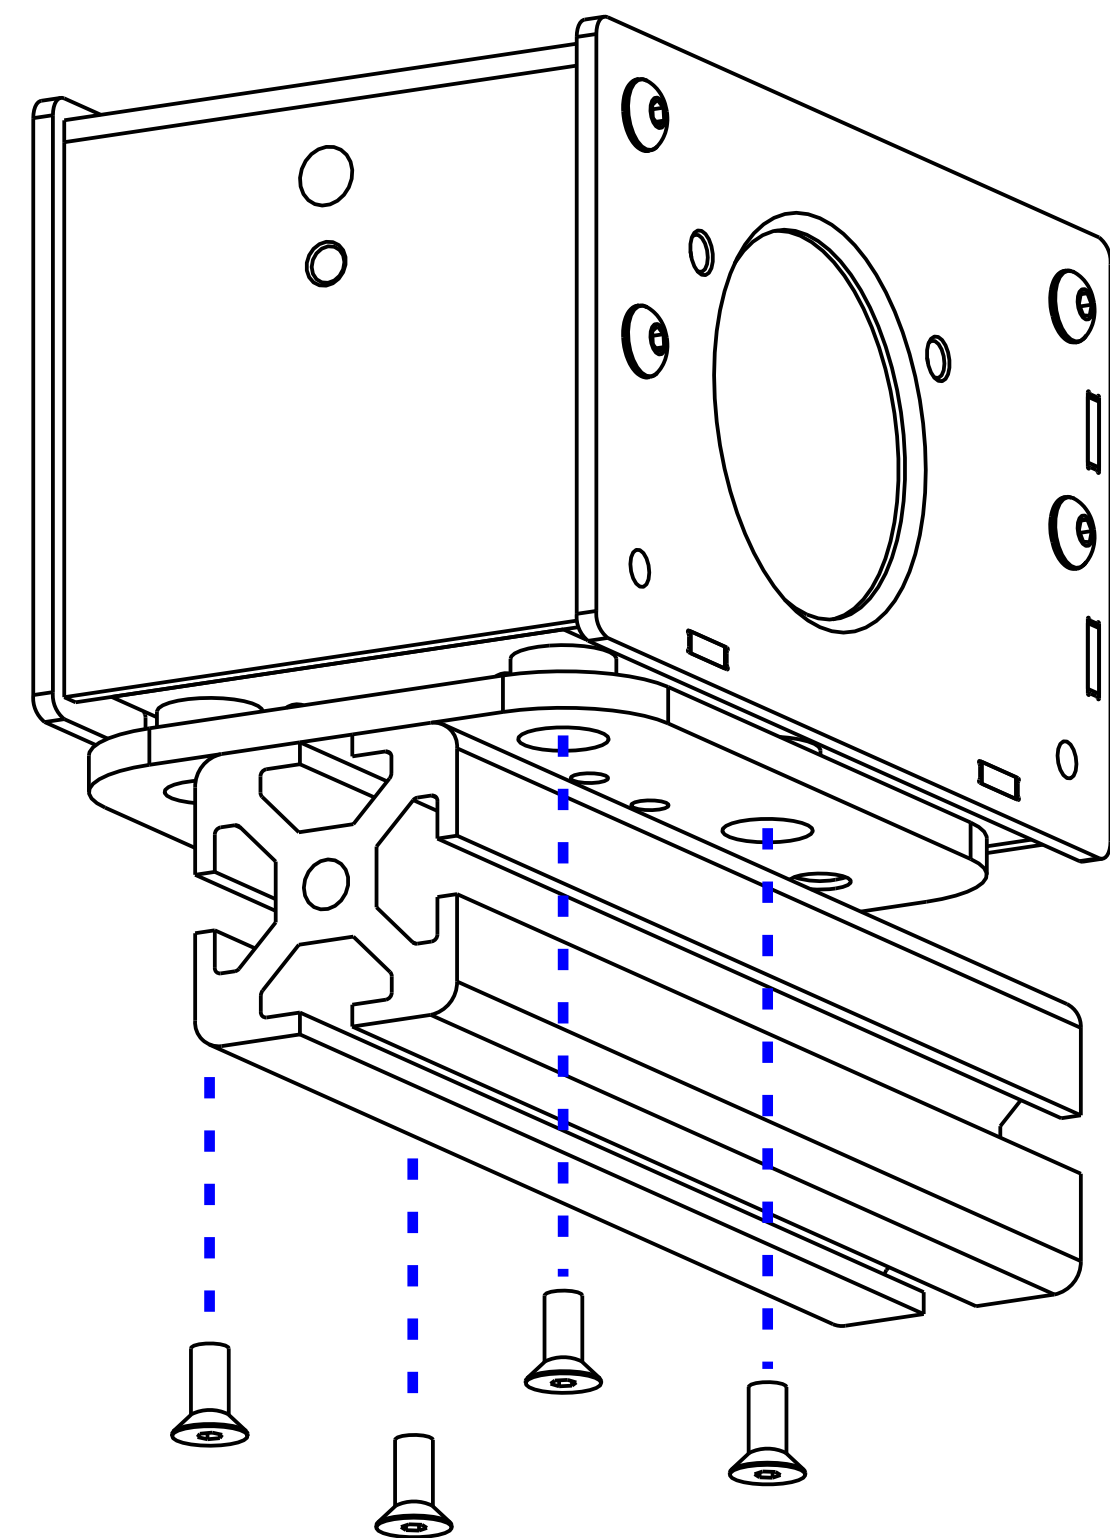


Mounting options

Plate position B


1

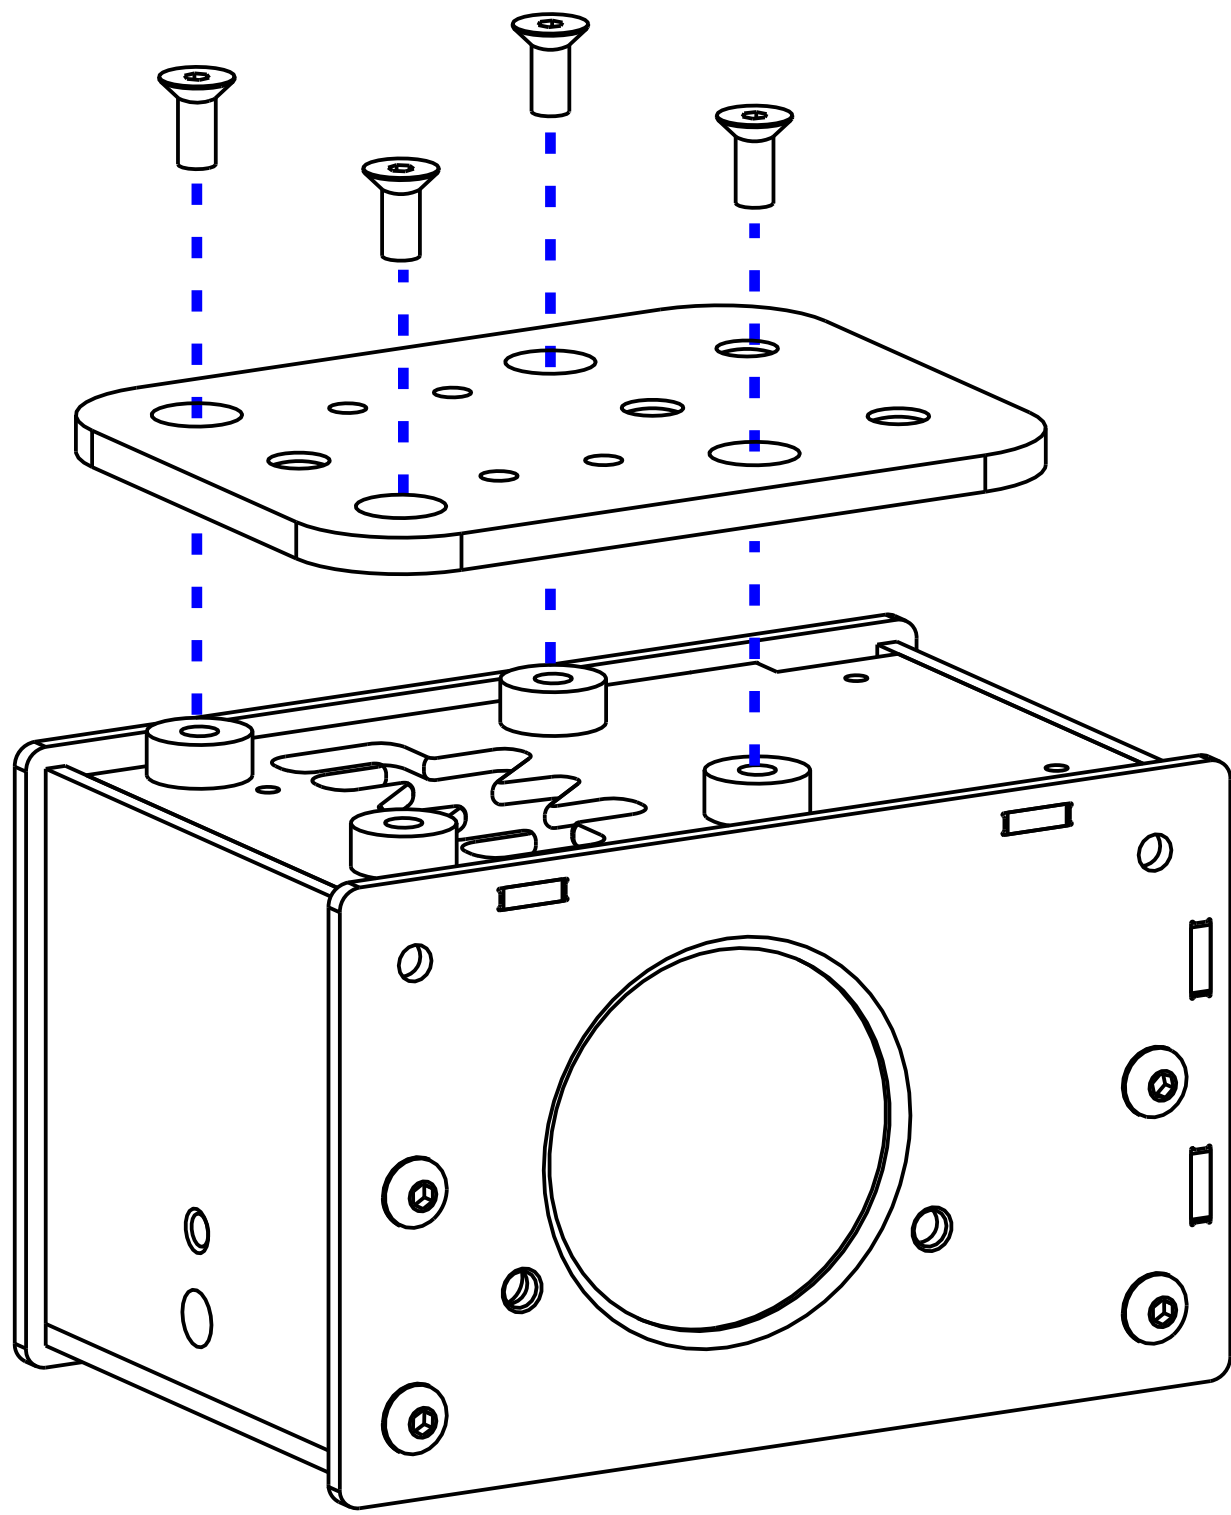

2

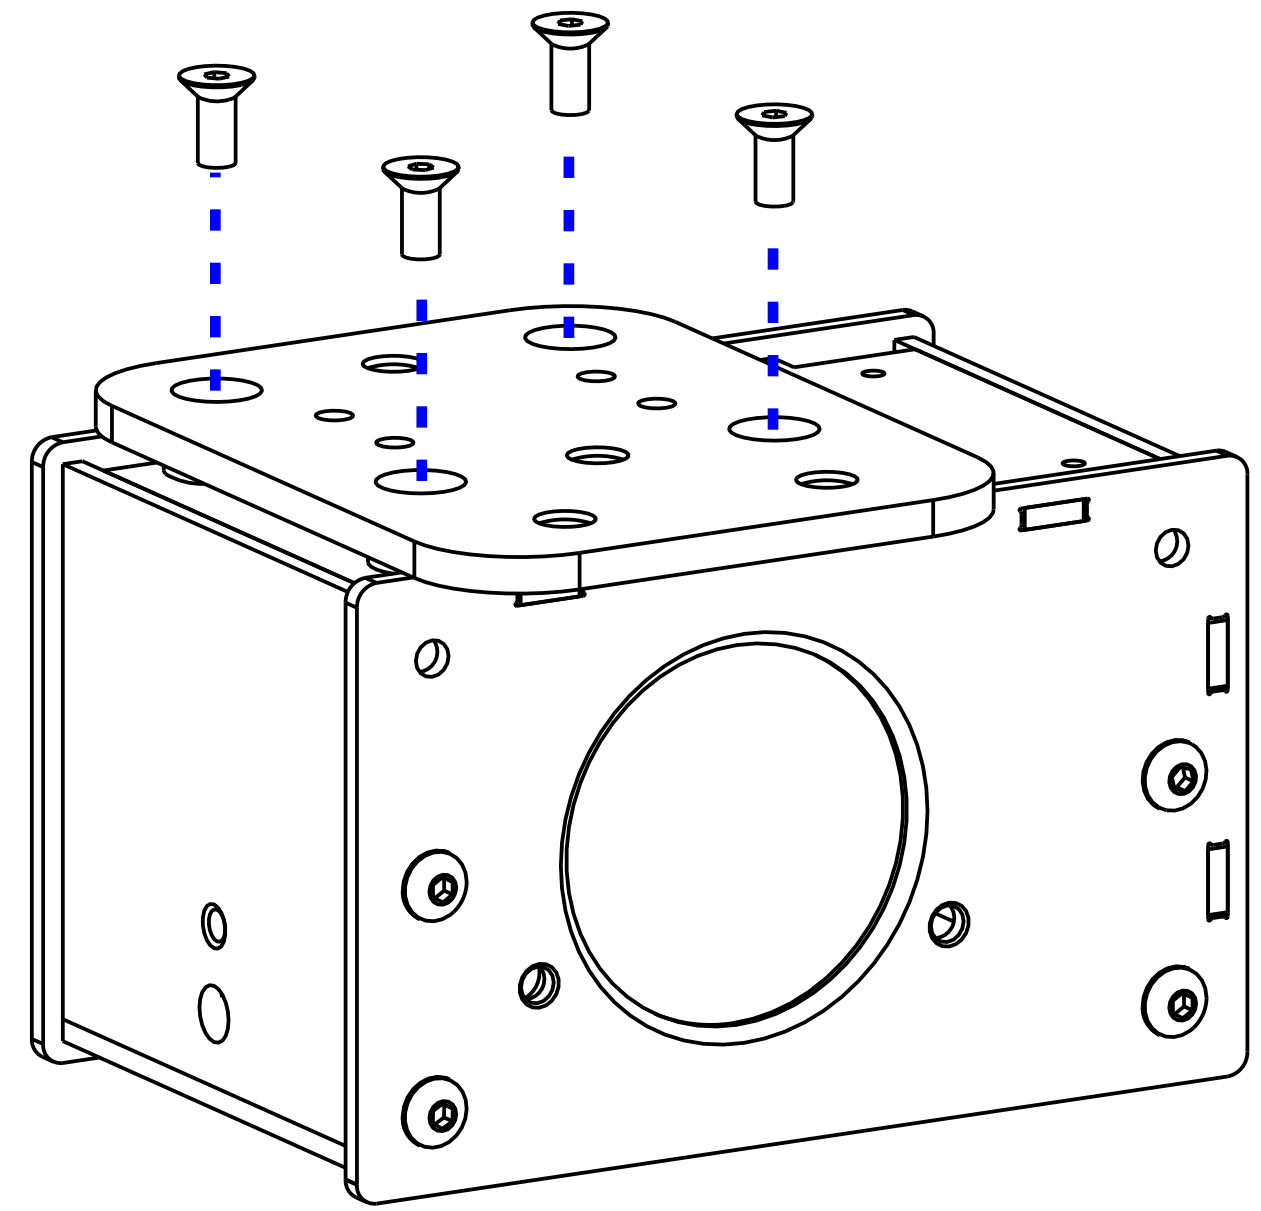

M8x16
2pcs

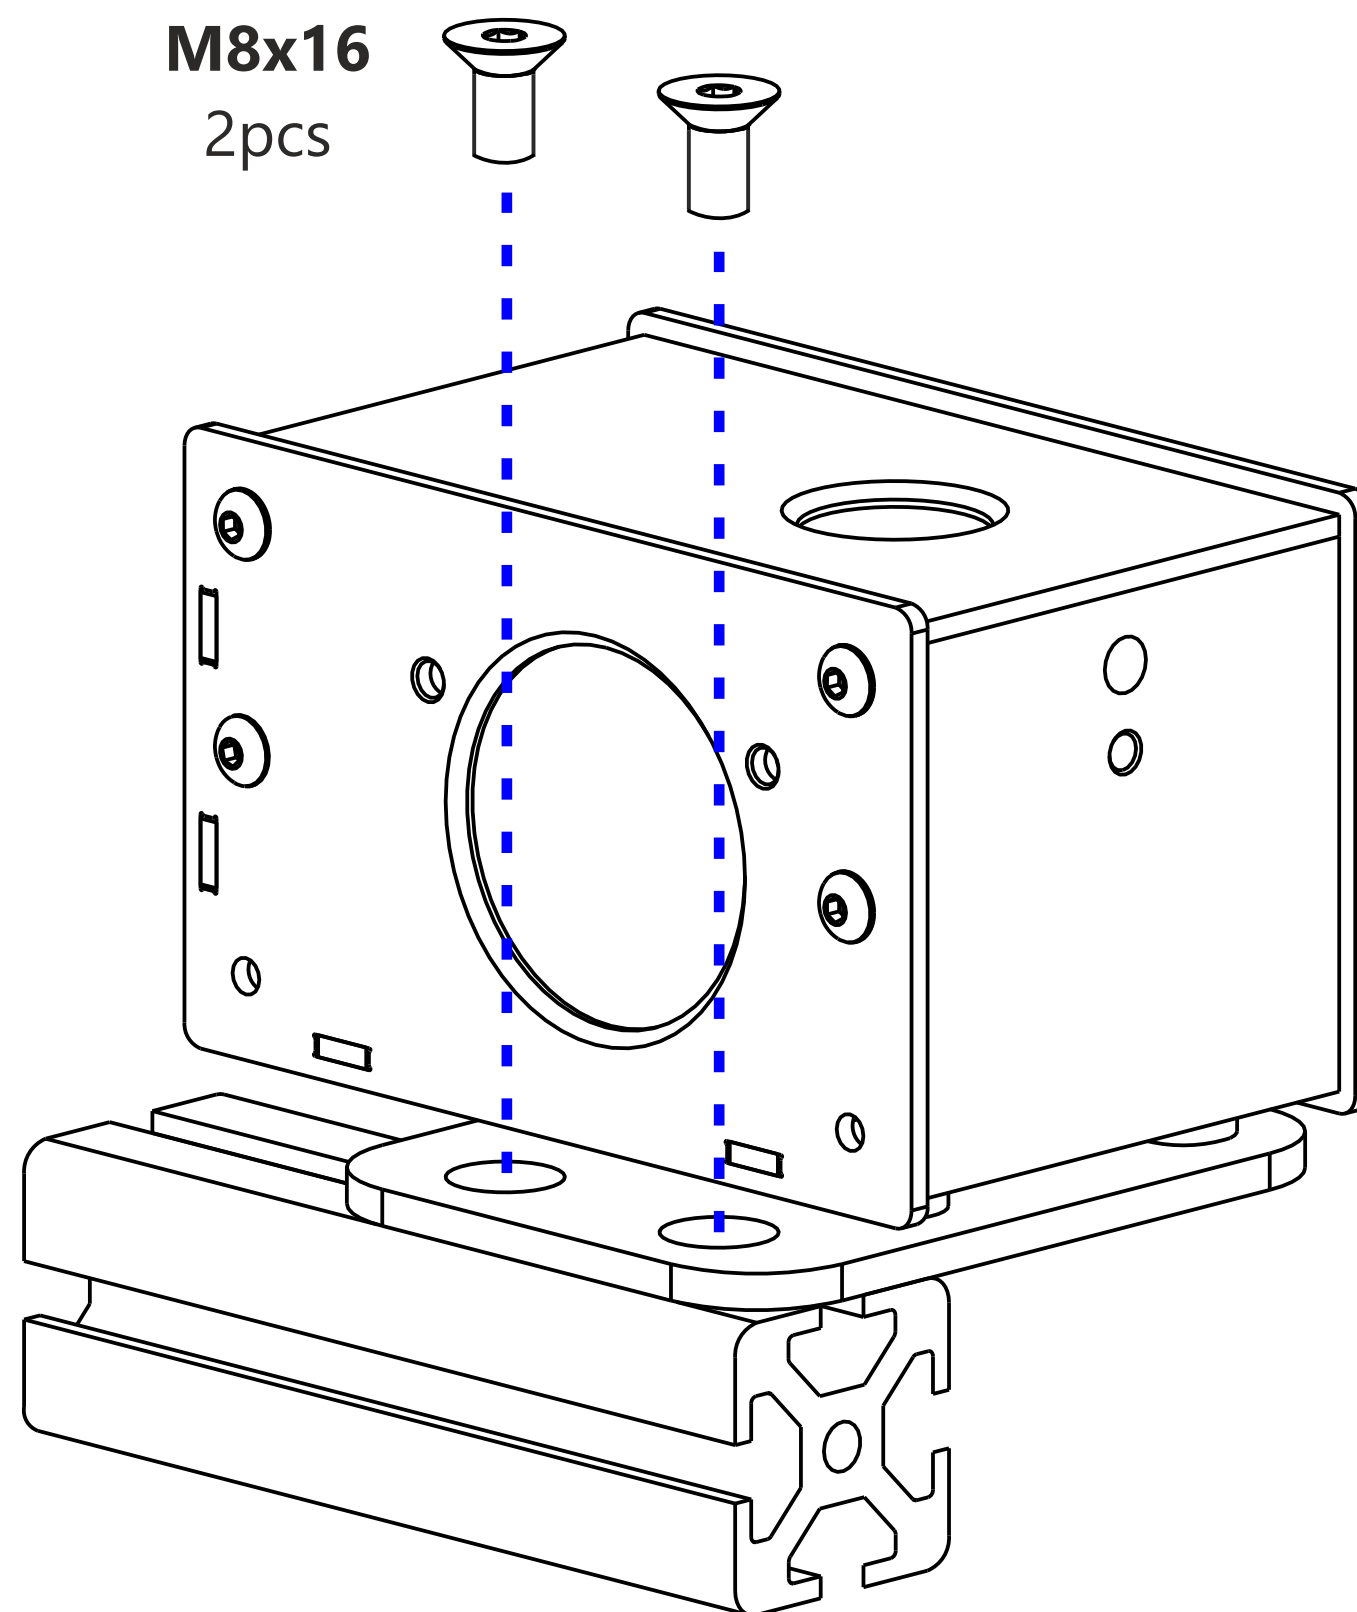


3


Mounting options

Clamp


1

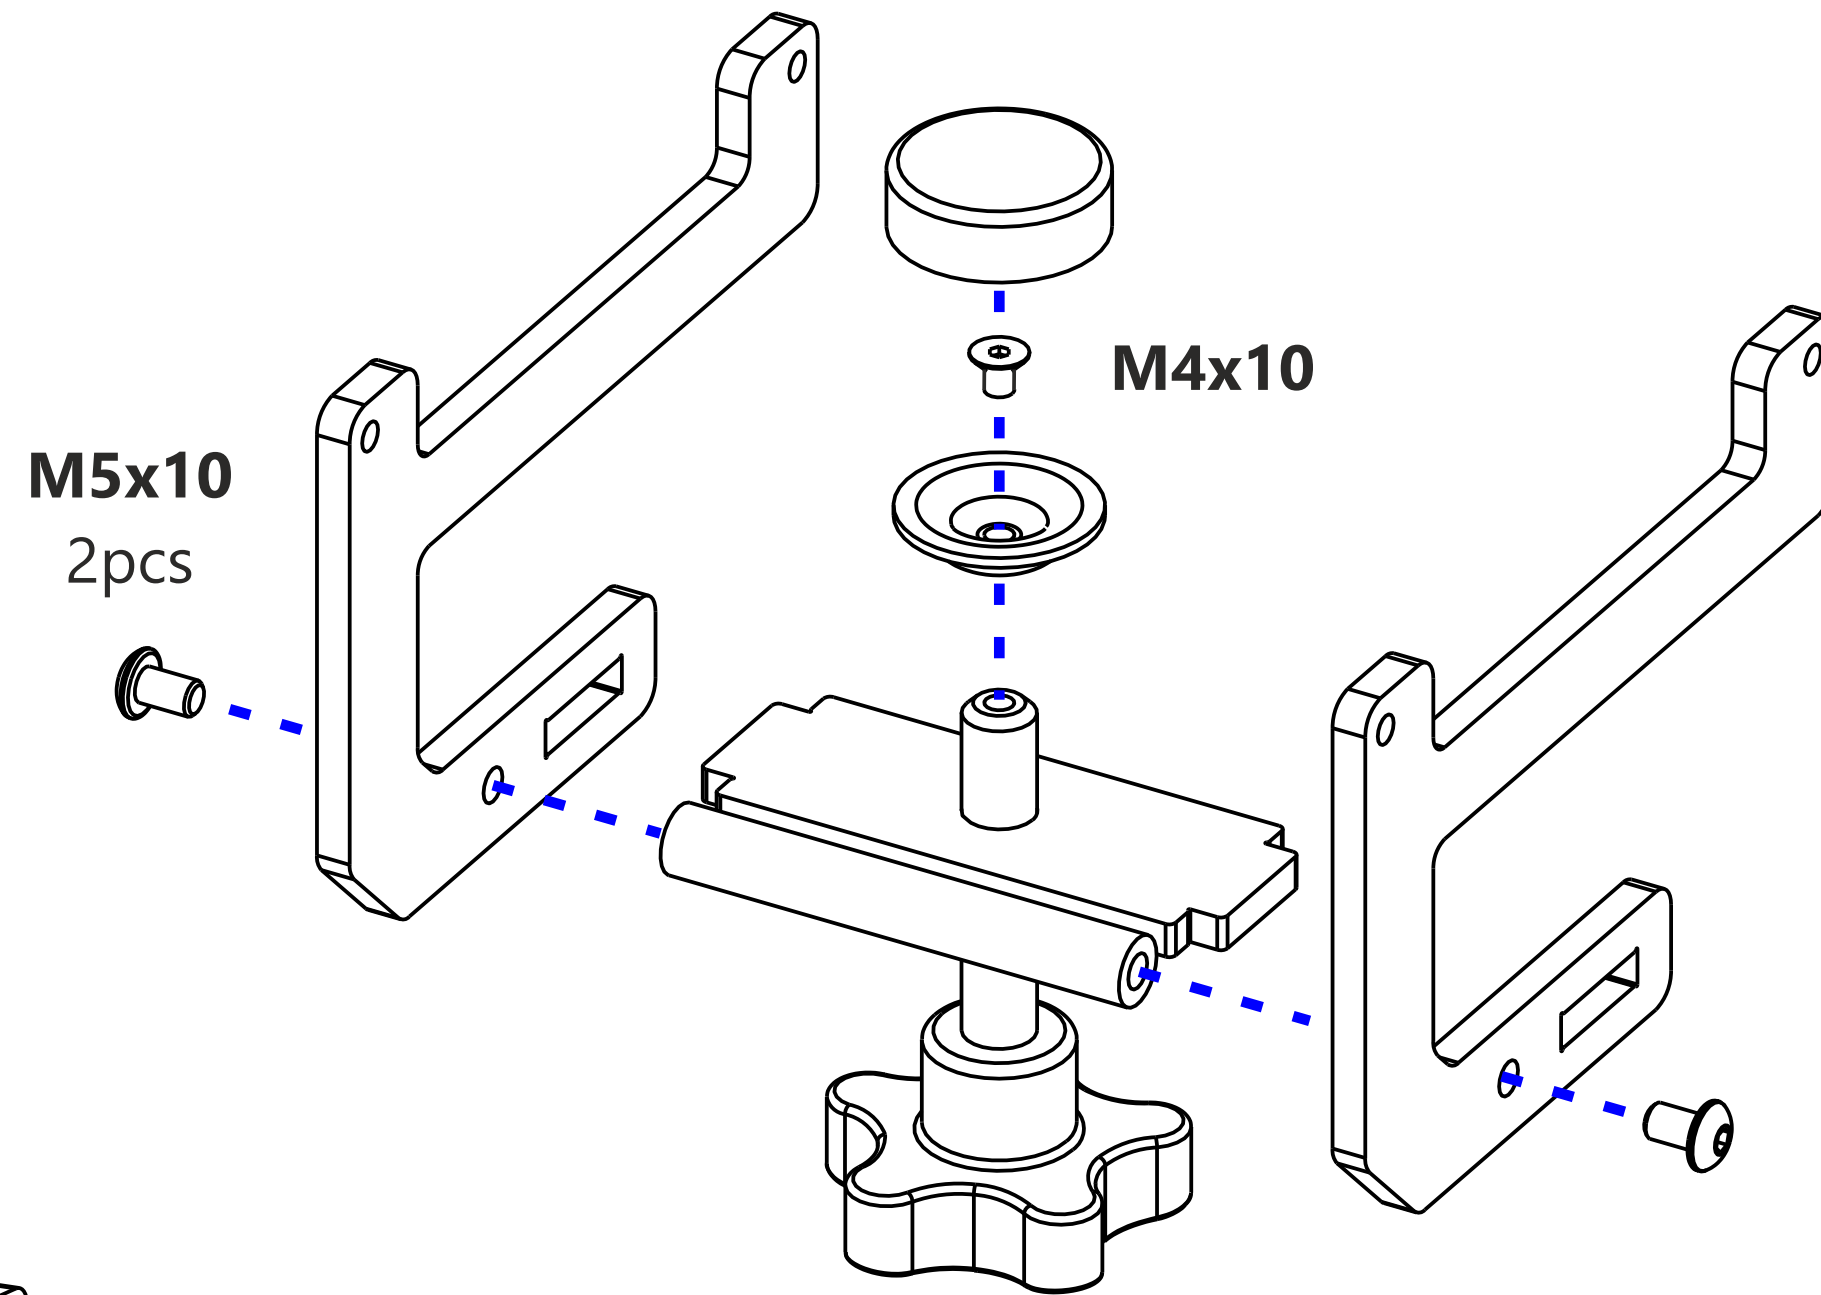

2

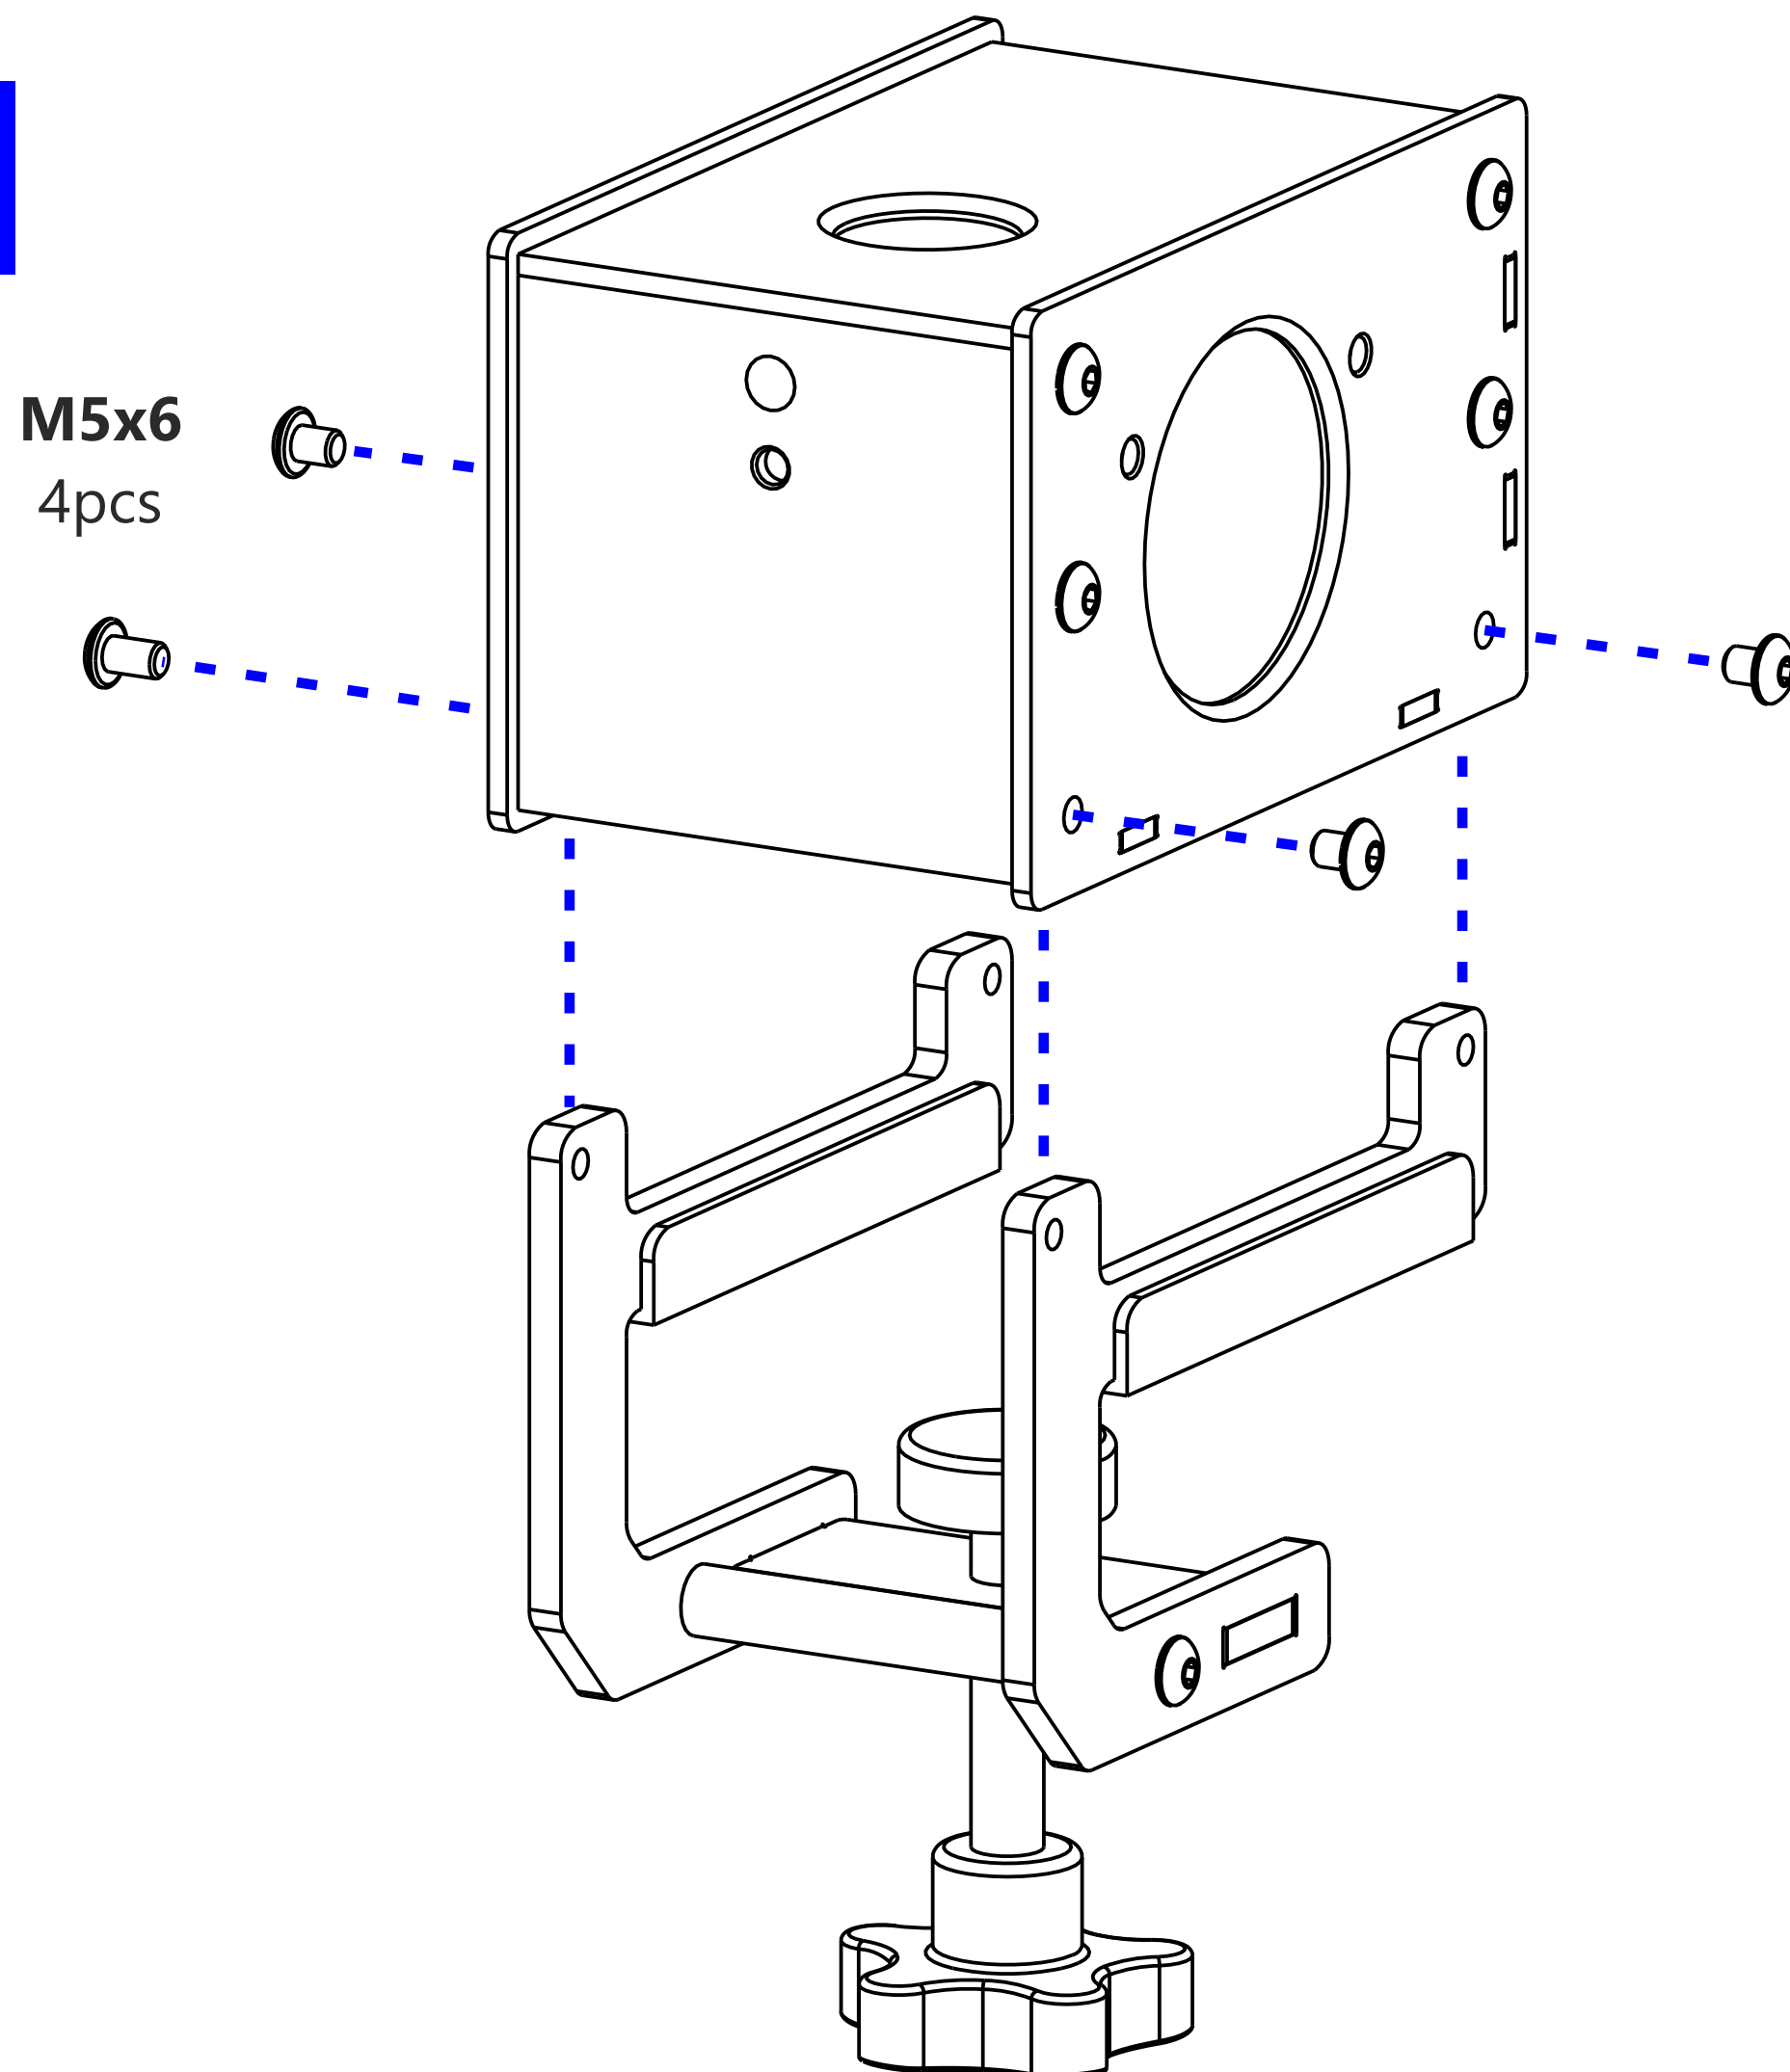


3

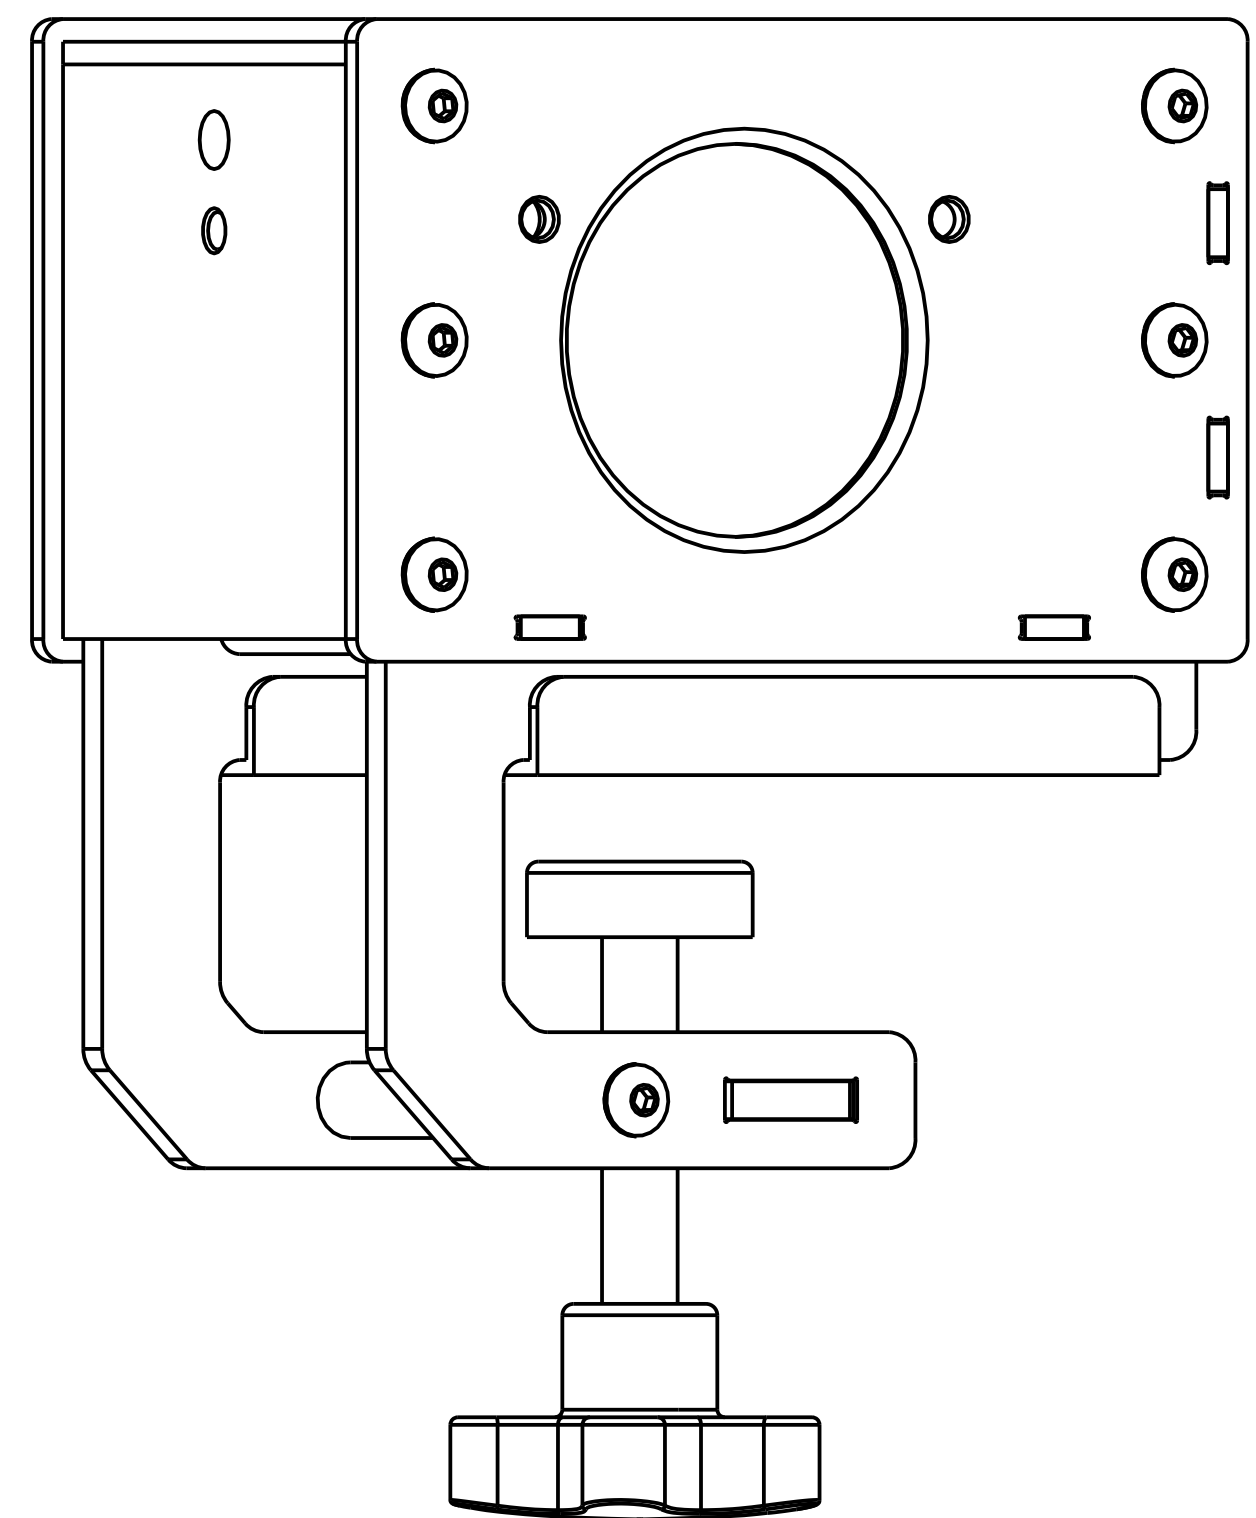


Mounting options

Bracket

1

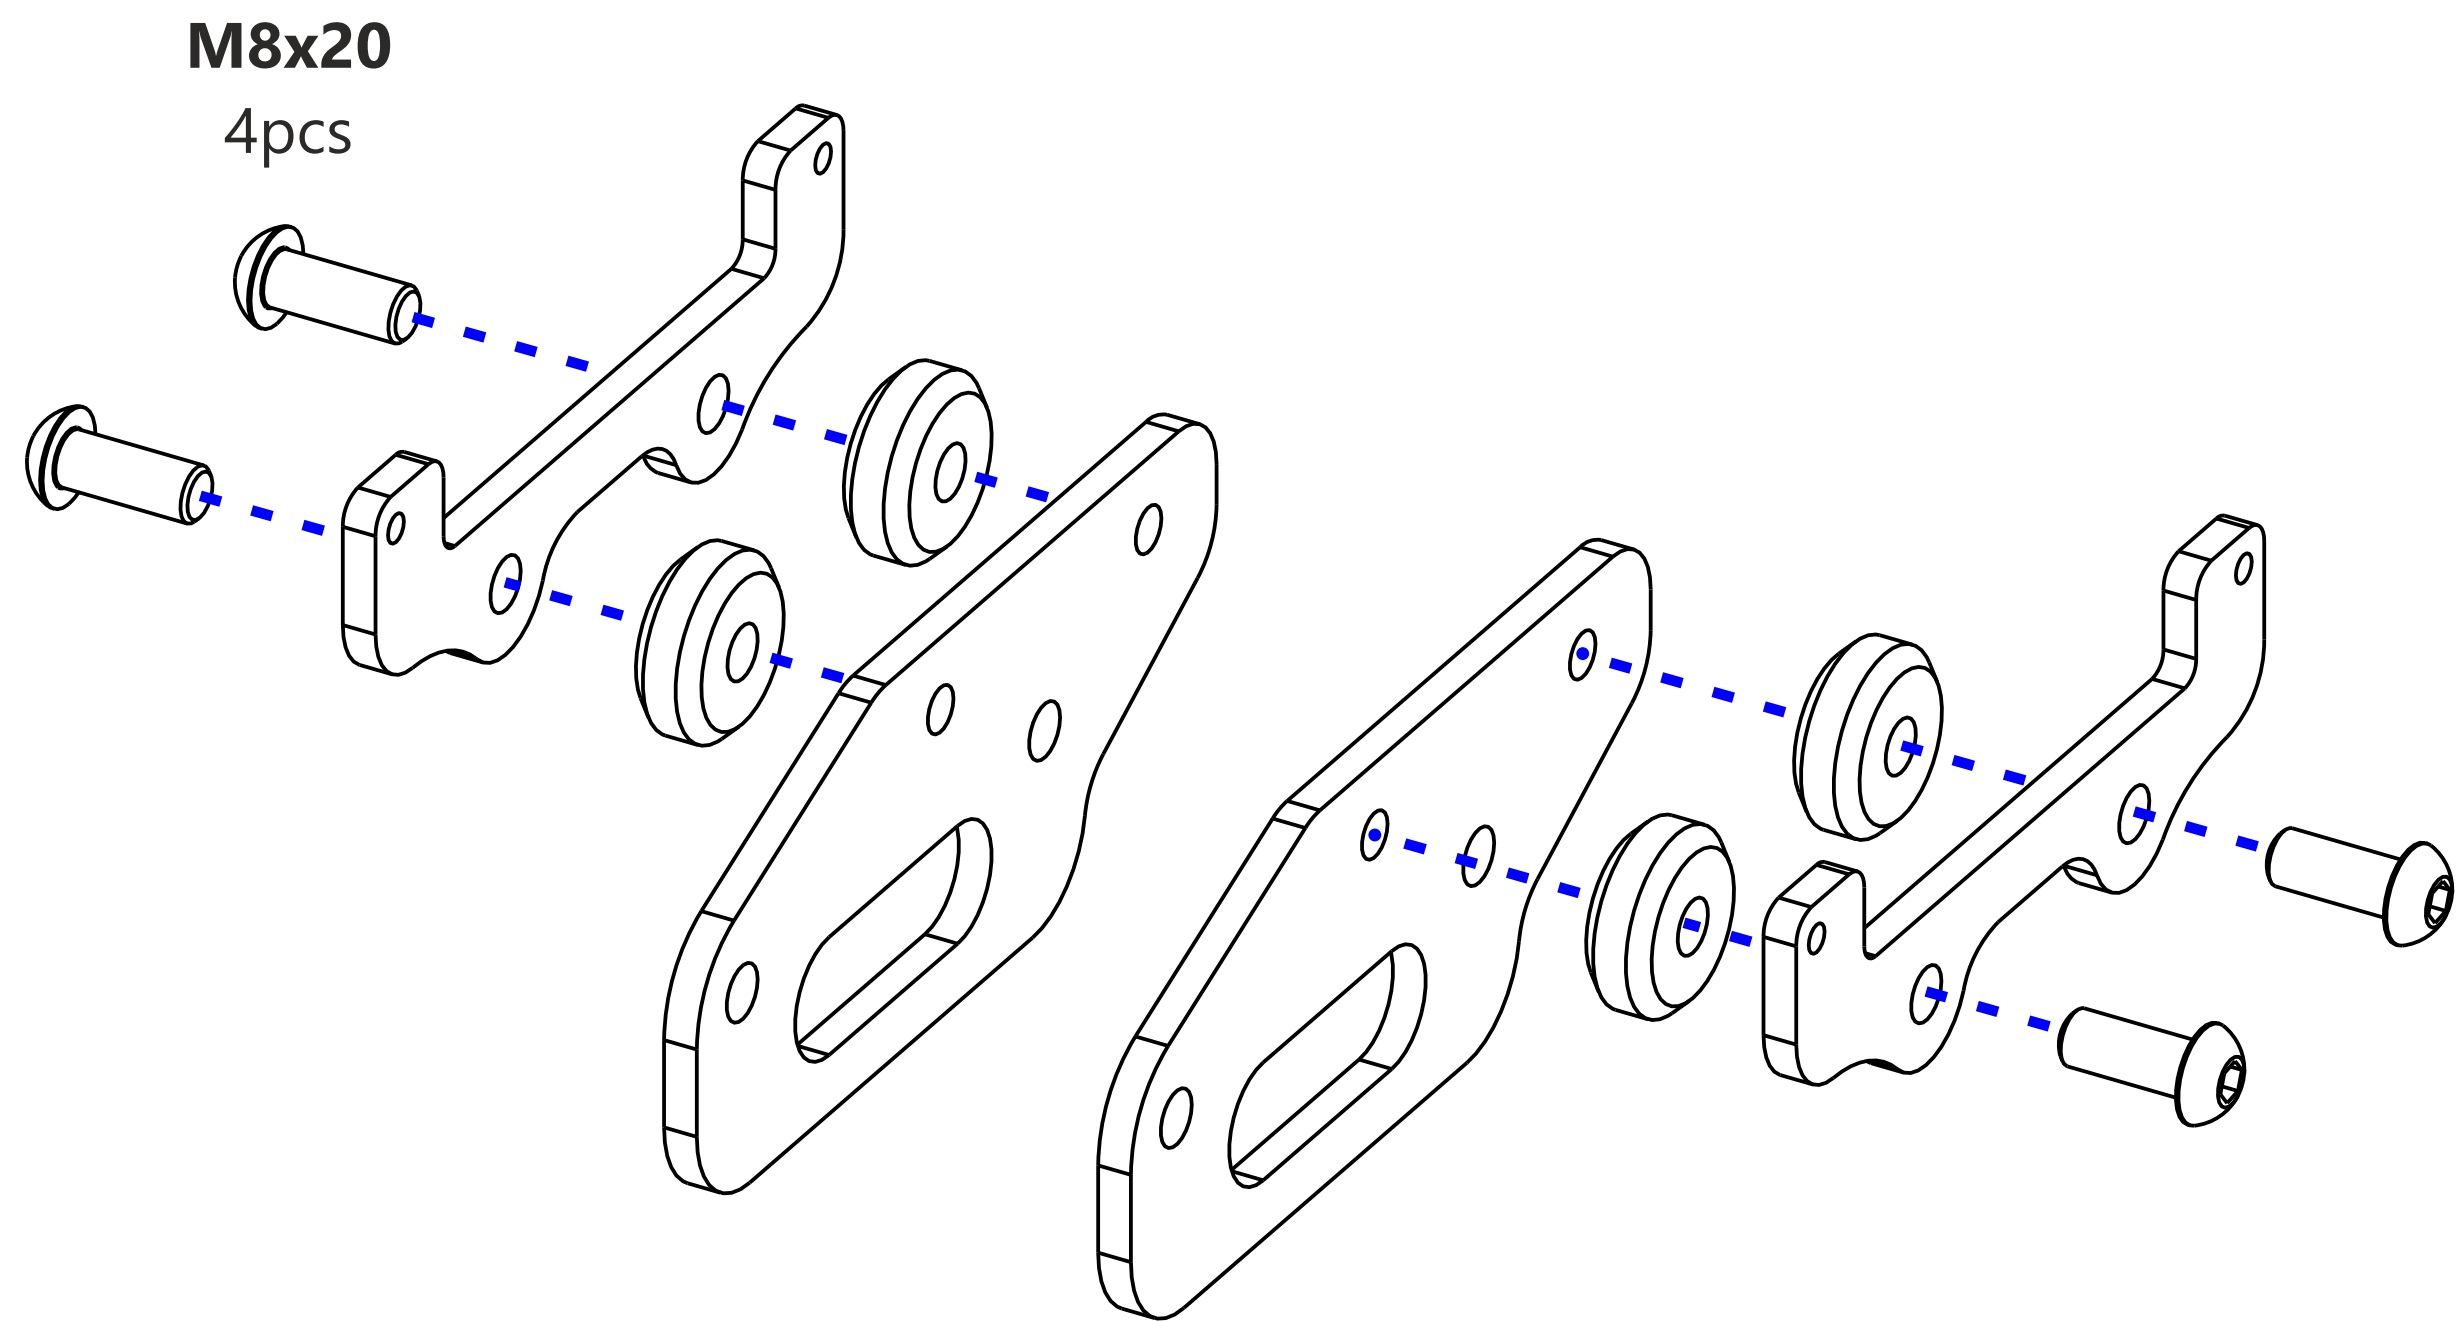

2

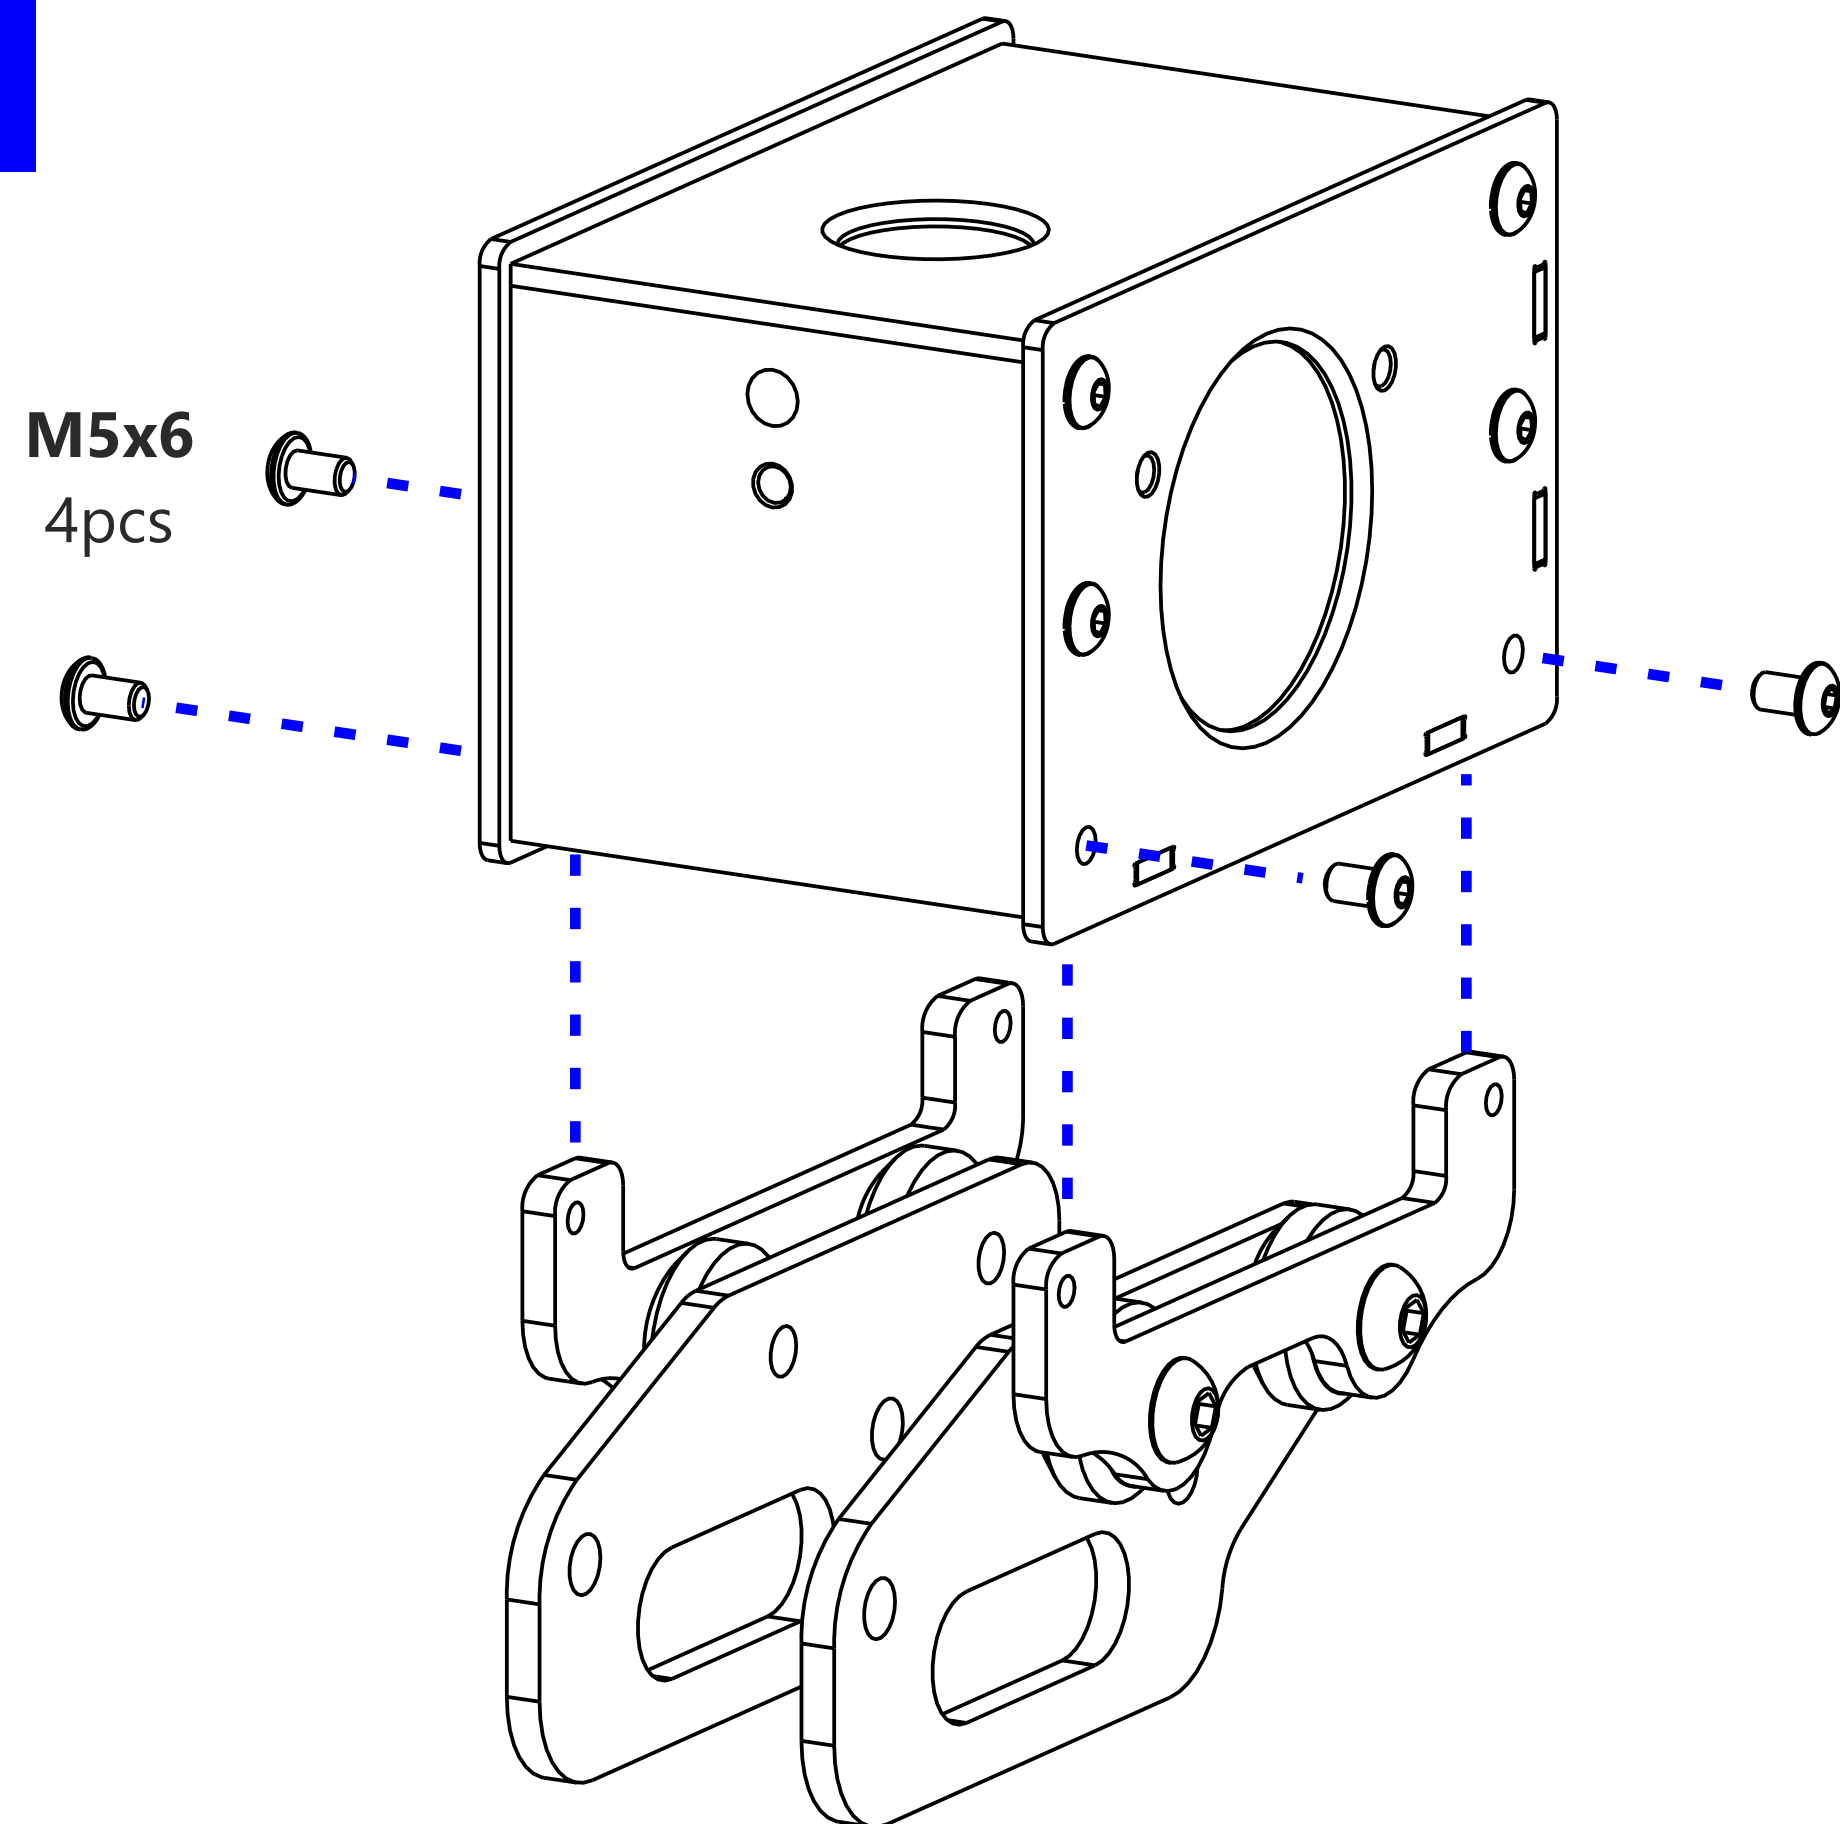

3

